

Here is the most
up-to-date version
of the installation
VIDEO



Here is the most
up-to-date version
of the installation
GUIDE



INSTALLATION GUIDE

10 - STEPS ALUMINUM STAIR STRINGER

(COLLECTION 10) • 9-1/16"

14030-60



Got a question? - Contact us:

First contact our friendly customer service team for assistance.

Email: info@pylex.com or phone: 1-800-264-1881

Monday to Friday: 8:30 am to 4:30 pm (EST)

Replacement of damaged or missing parts will be shipped promptly.

Rev.: 42-1205



DECK AND FENCE HARDWARE
WWW.PYLEX.COM / 1 800-264-1881


BEFORE YOU START IMPORTANT MEASURES

NUMBERS OF STRINGERS - RESIDENTIAL USE : ON STAIRCASE WIDTH

24" - 60" : 2 stringers


61" and + : 1 stringer every 36" max

FOR COMMERCIAL USE - PLEASE CONTACT US.

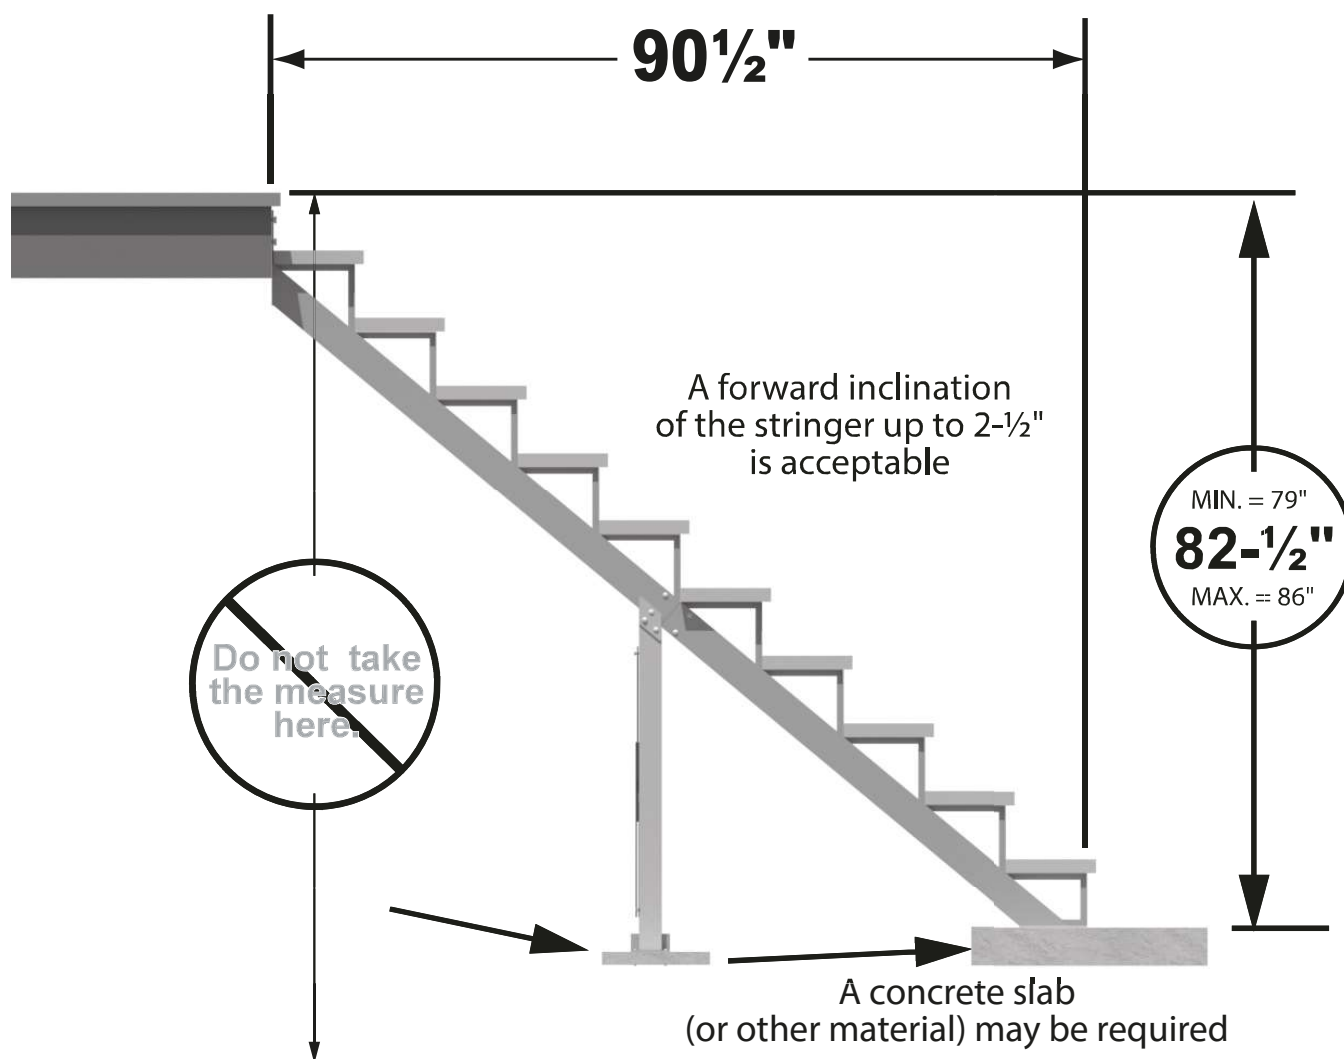


Before installing this product, make sure it complies with local building codes. Check with your municipality to avoid reaching underground or public installations. This product can be potentially dangerous if used improperly. Produits Pylex is not responsible for any damage or loss caused by the use of this product.


PARTS LIST

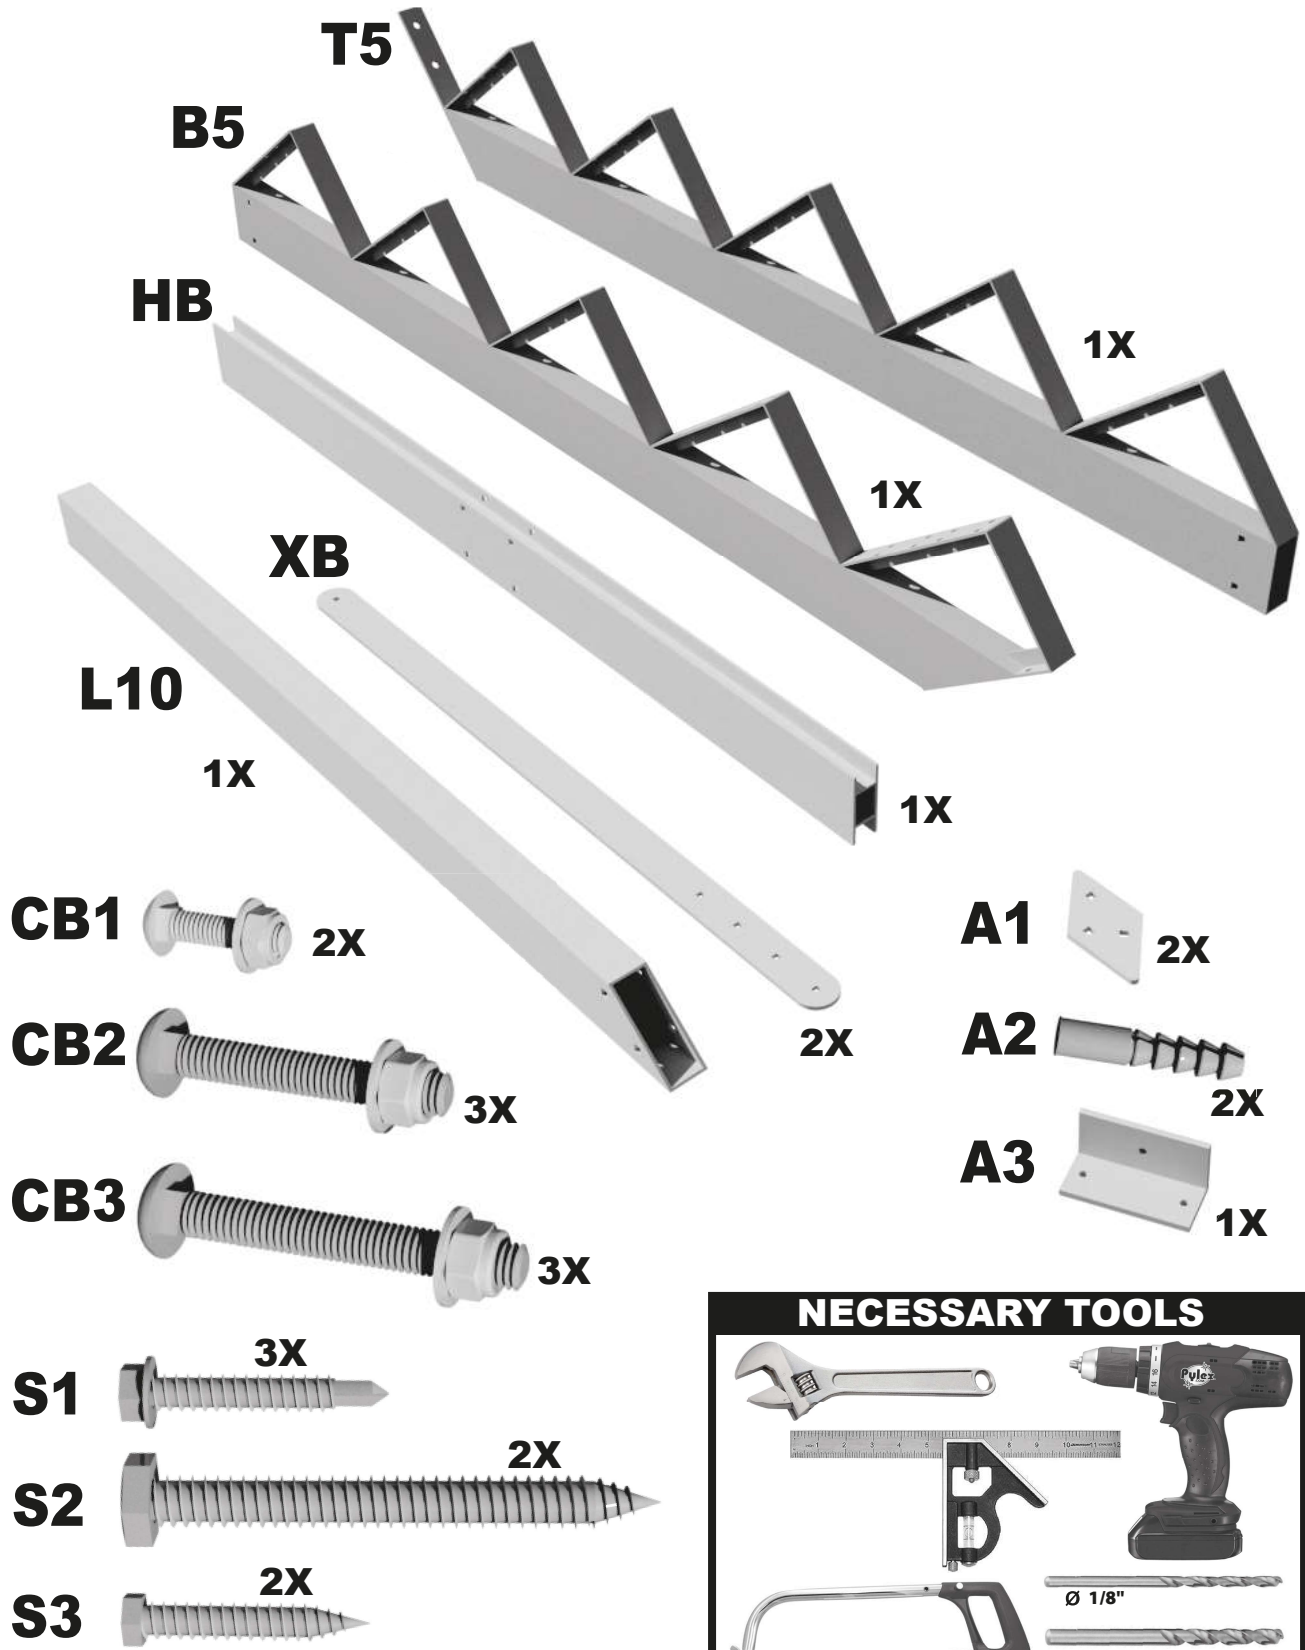

10 STEP 1
STEPS

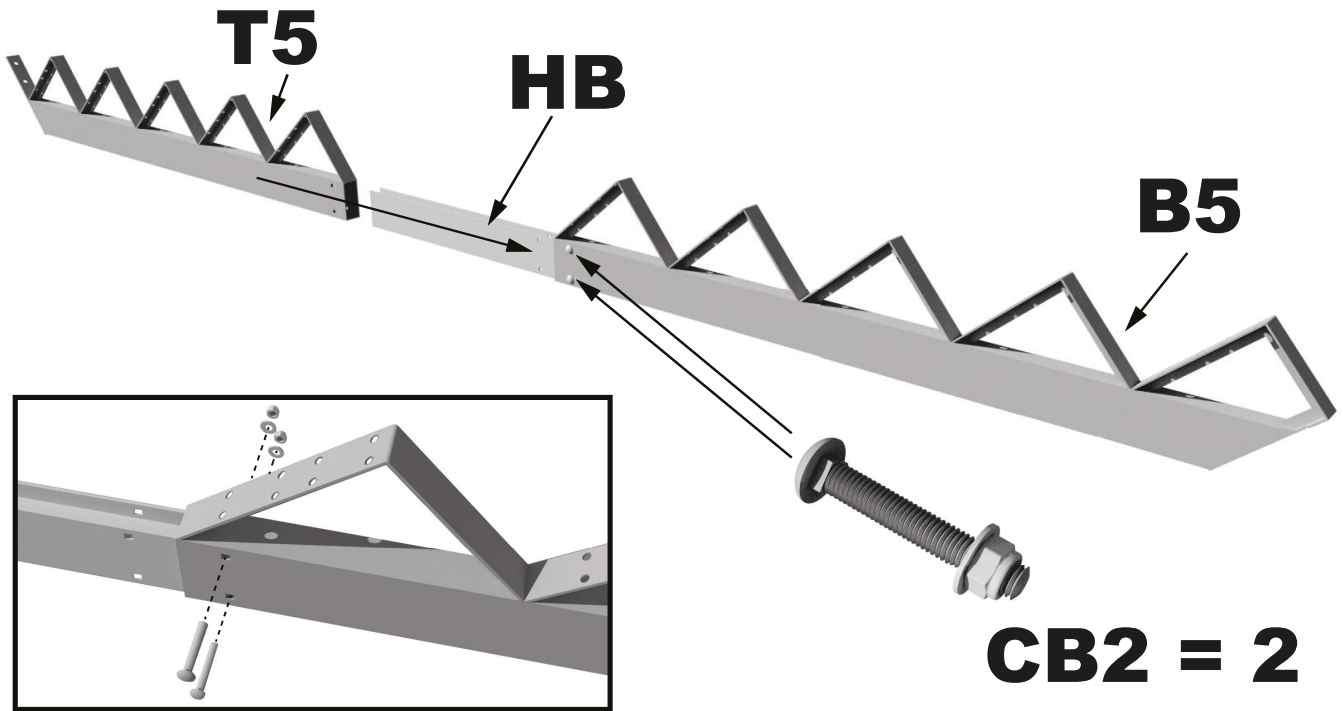


STEP 2

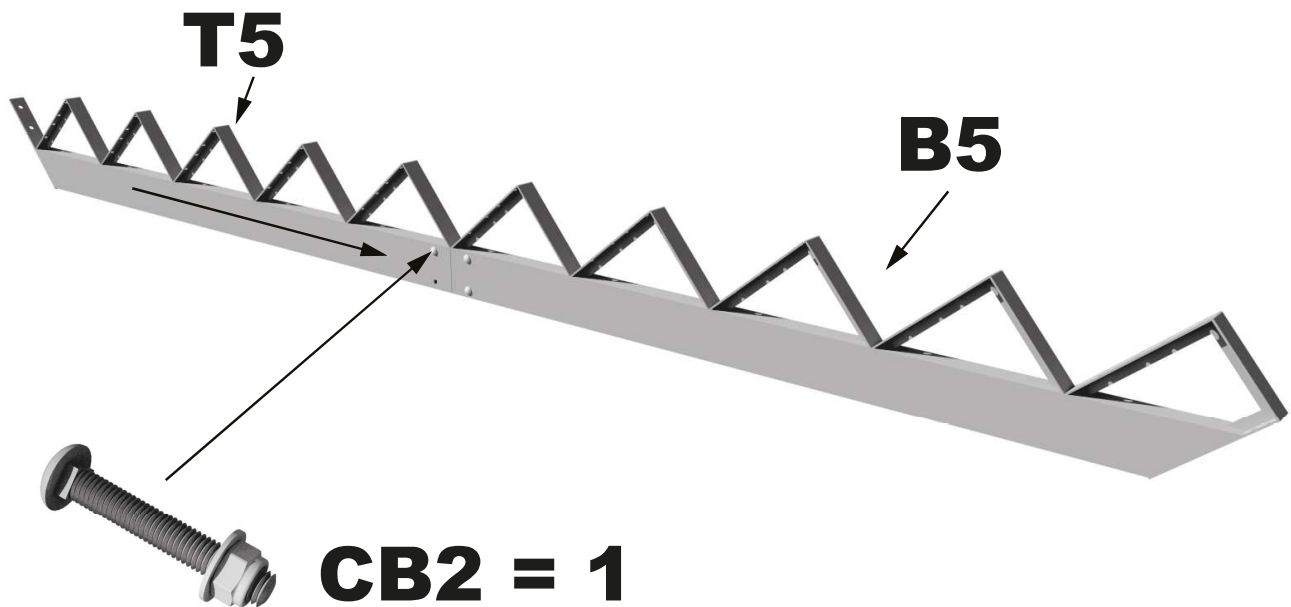

10


STEPS

STEP 3 - A1 PLATE INSTALLATION

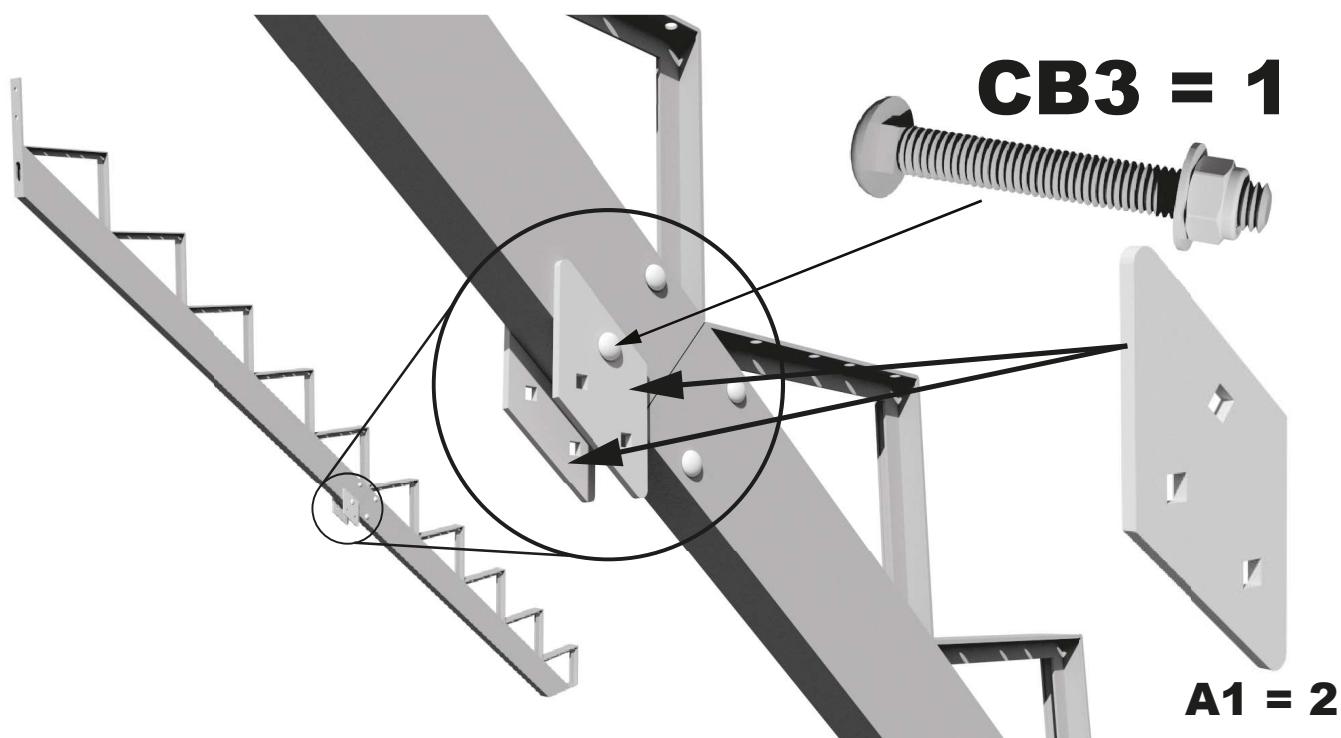


STEP 4 - FIX STEP AT THE BOTTOM


WOOD

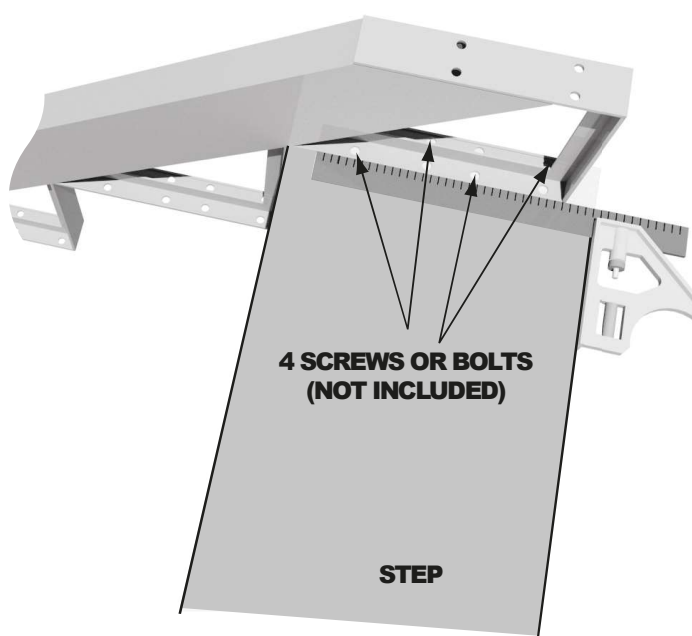

ALUMINUM

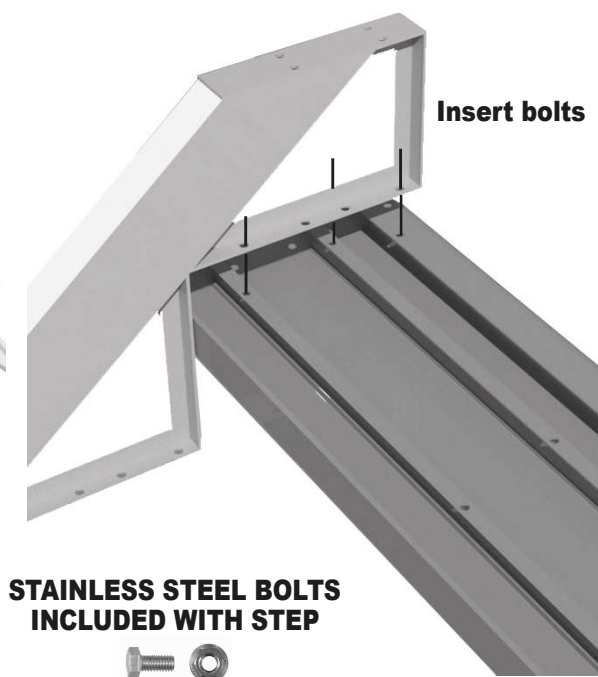


WOOD

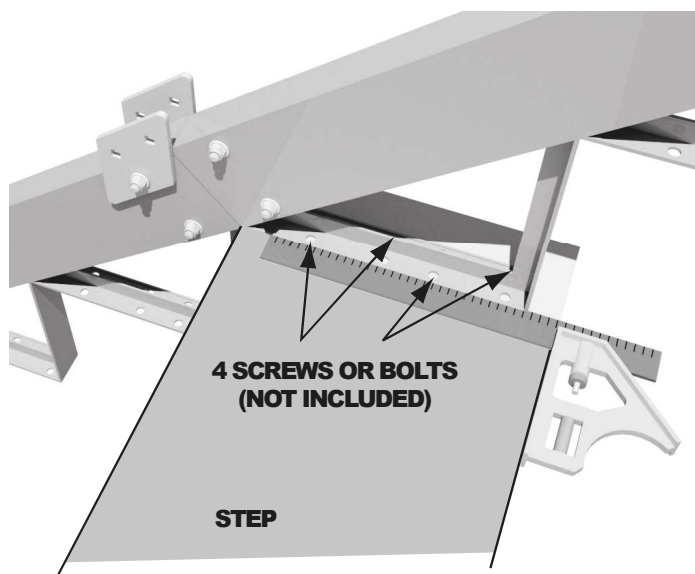

ALUMINUM


**STAINLESS STEEL BOLTS
INCLUDED WITH STEP**

Insert bolts

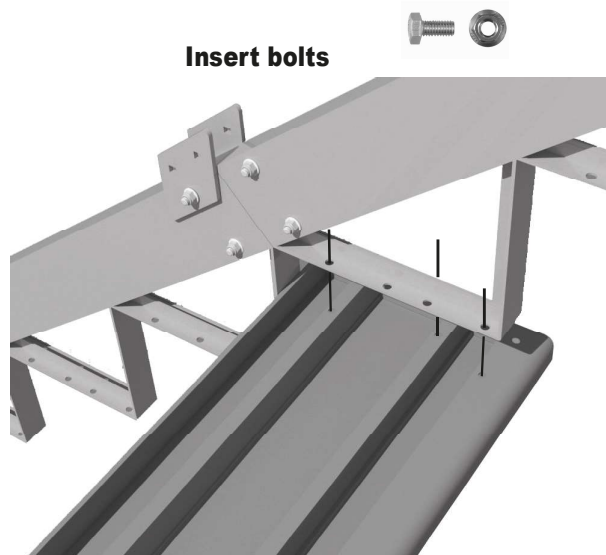


STEP 6 - FIX STEP AT THE TOP

WOOD

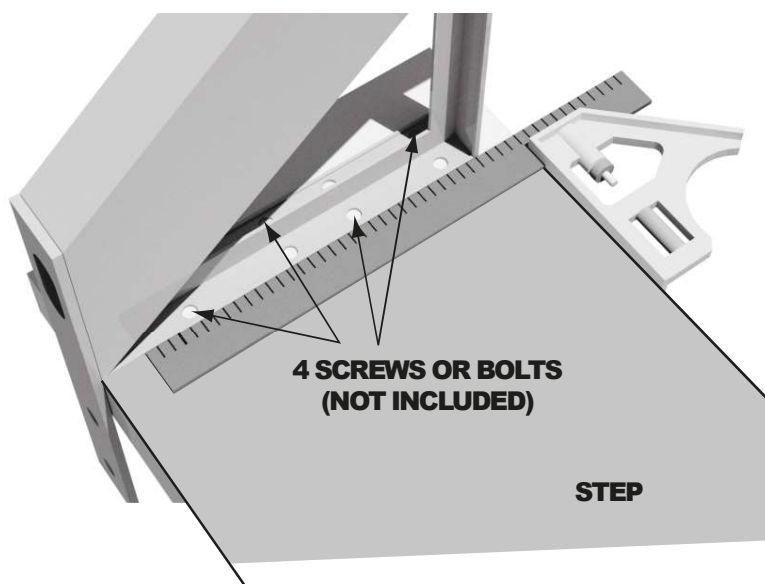


ALUMINUM

Insert bolts

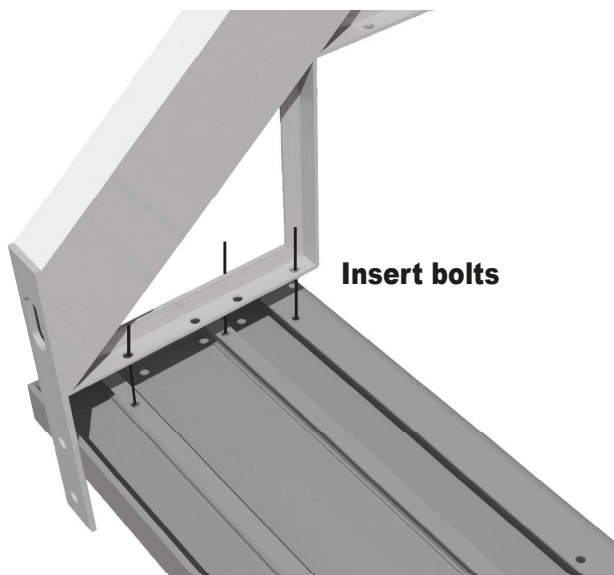



**STAINLESS STEEL BOLTS
INCLUDED WITH STEP**



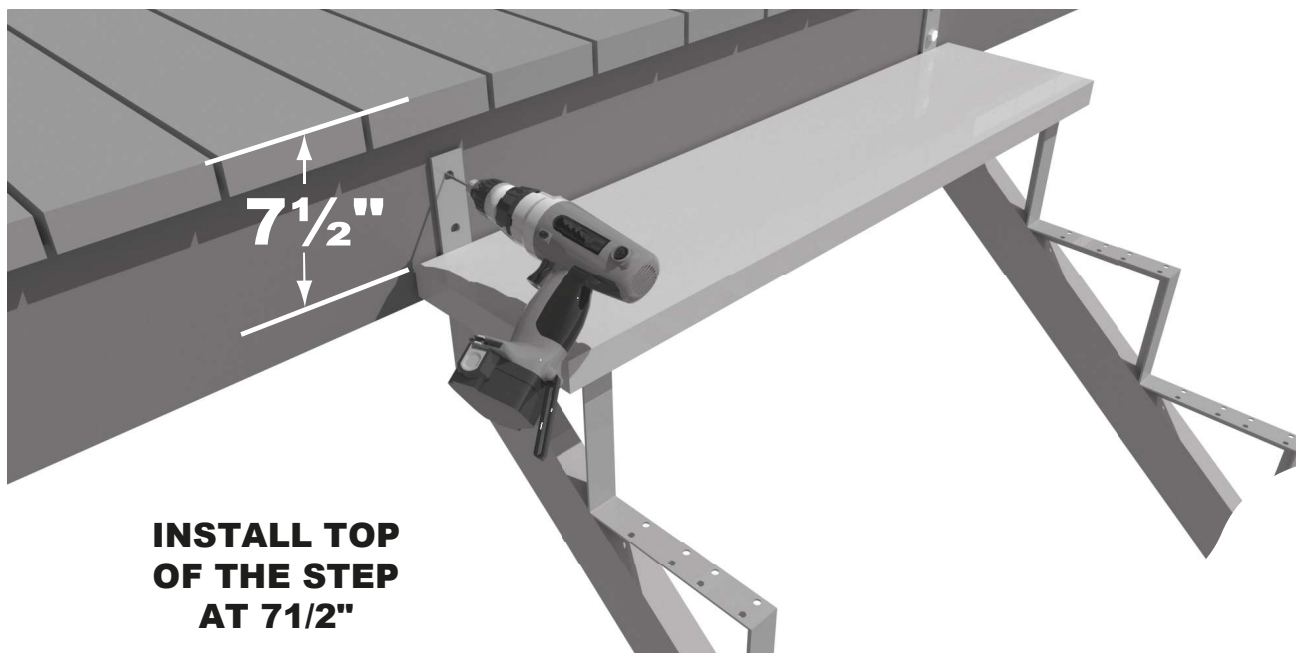


STEP 8

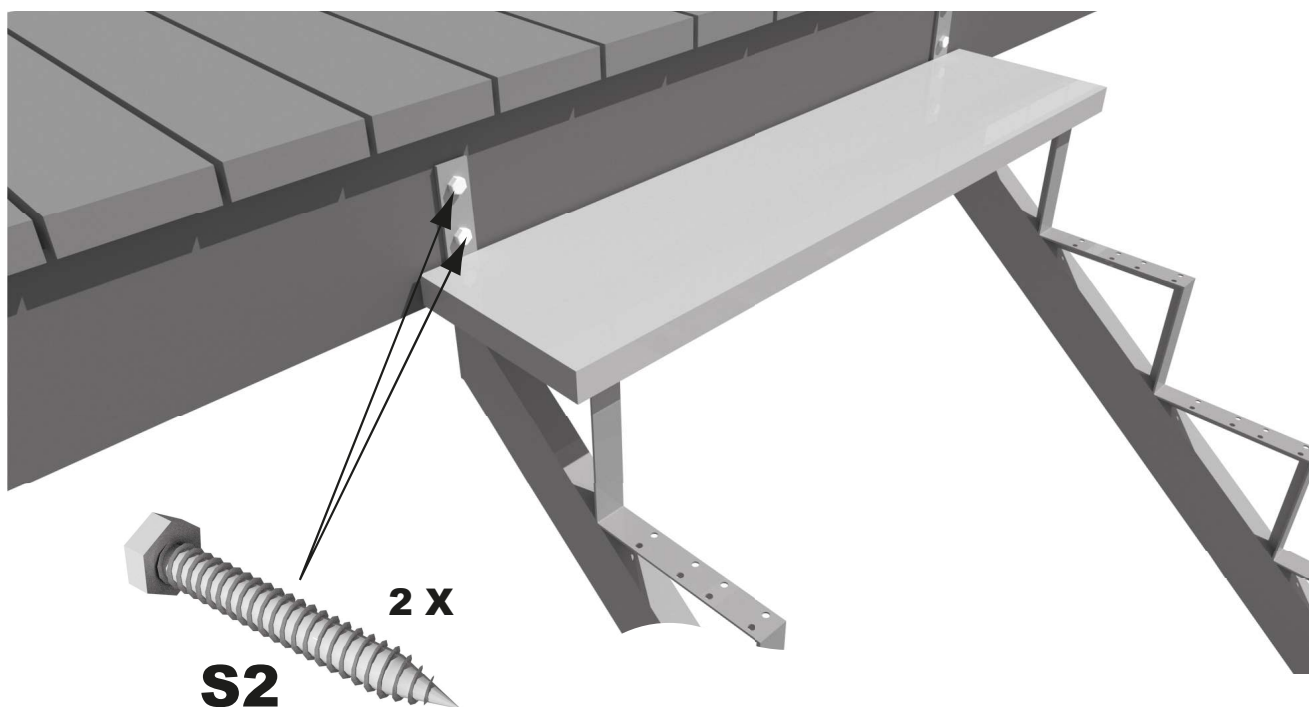

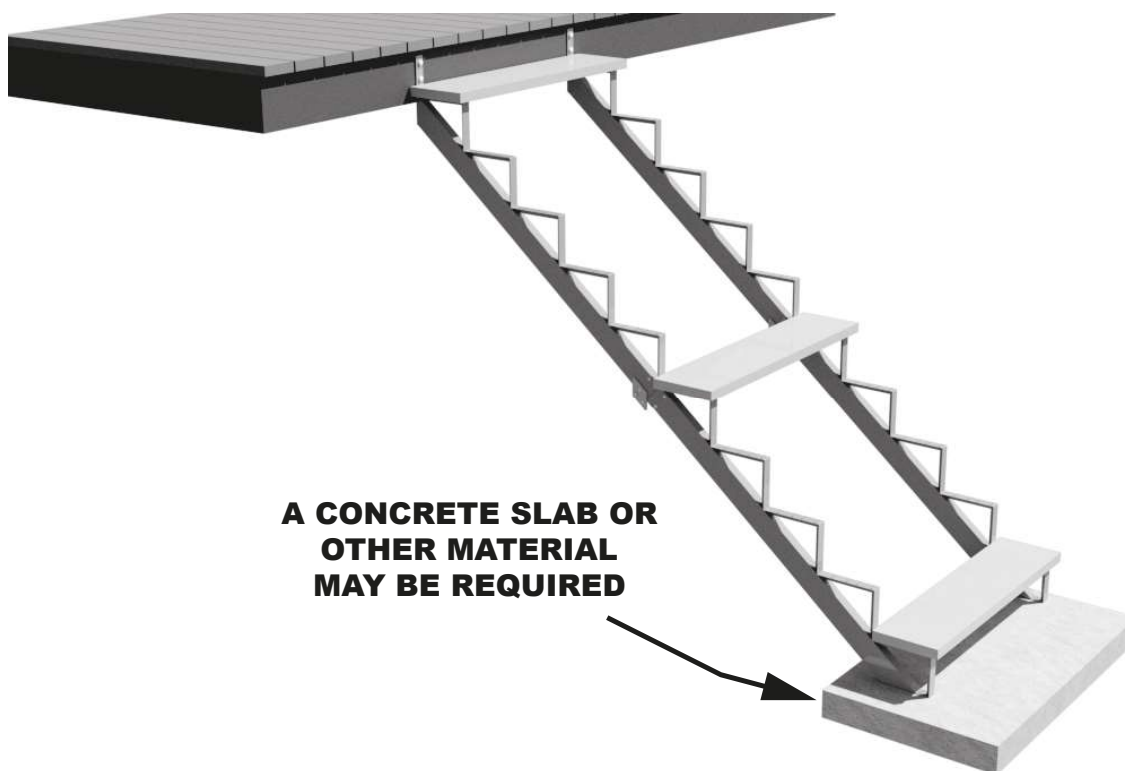

STEP 10 - INSTALLATION OF SUPPORT POST

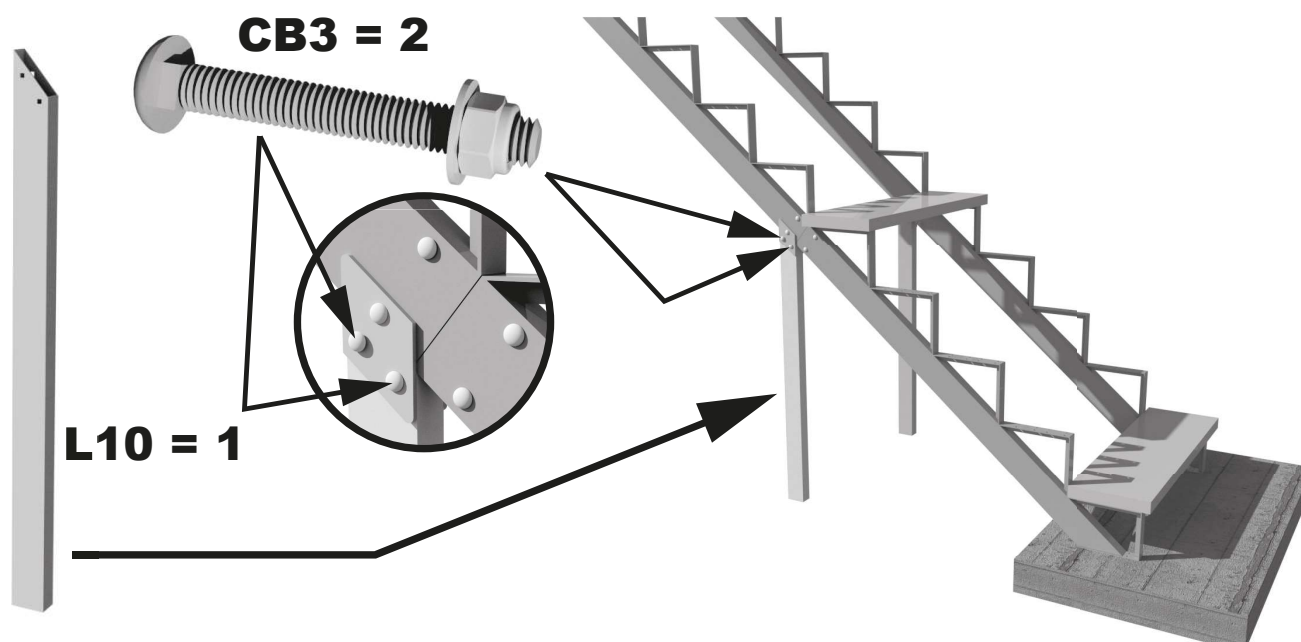

10



STEPS

STEP 11 - INSTALLATION OF SUPPORT POST (CONT'D)

**CUT SUPPORT
POSTS AT
DESIRED LENGTH**




**AND REMOVE THE
THICKNESS OF
PART A3: 1/4"**

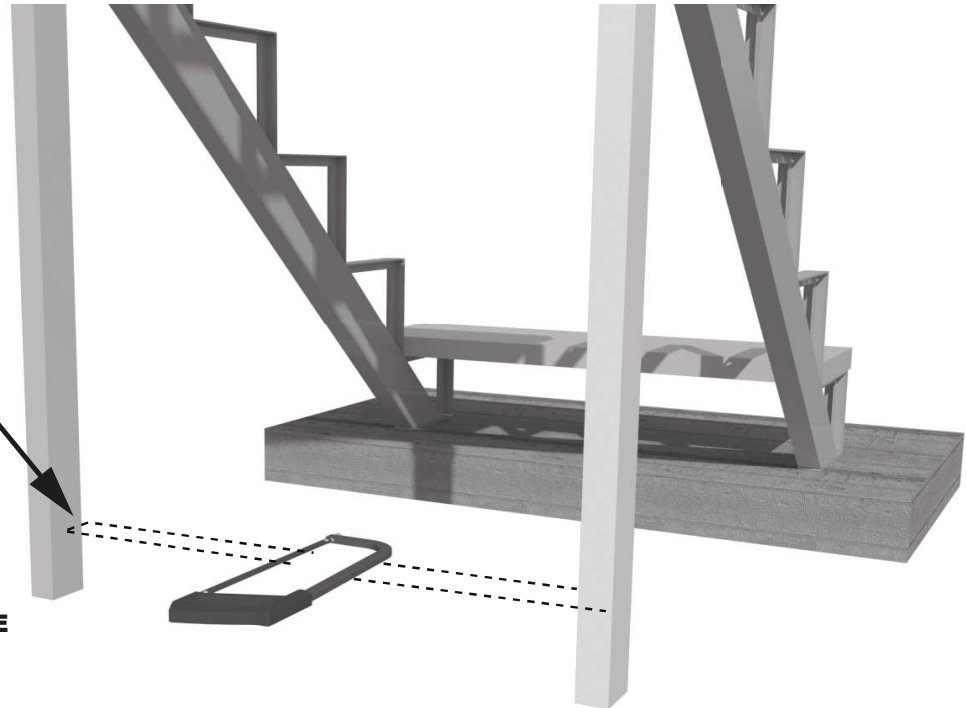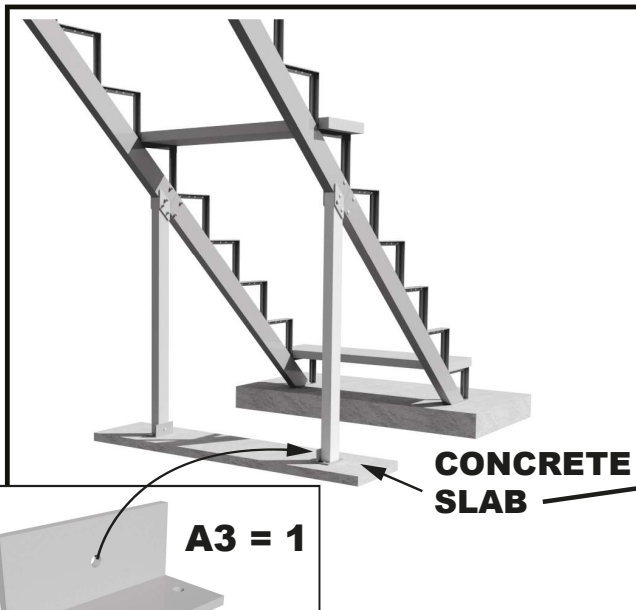**STEP 12 - POST INSTALLATION (ON CONCRETE SLAB)**

**CONCRETE
SLAB**

A3 = 1




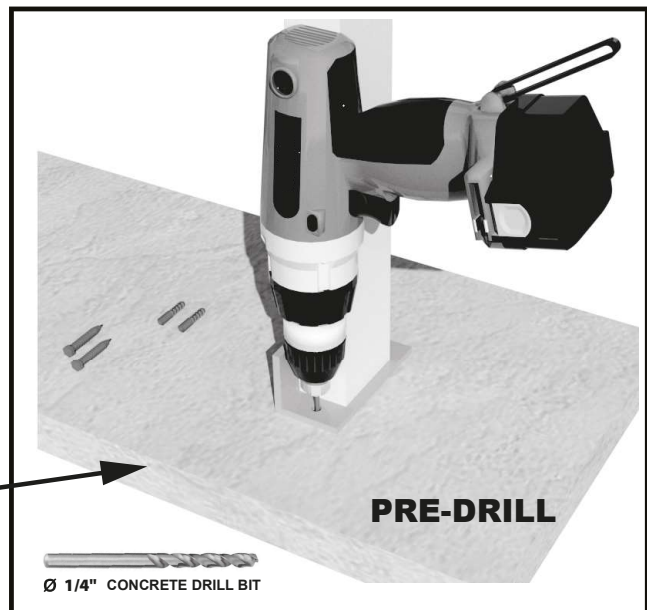


PRE-DRILL

Ø 1/4\"/>

10

STEPS

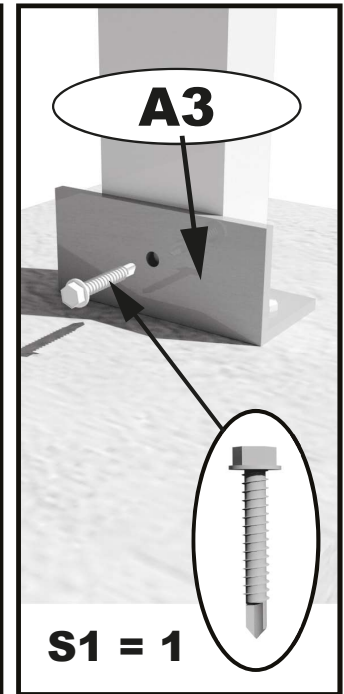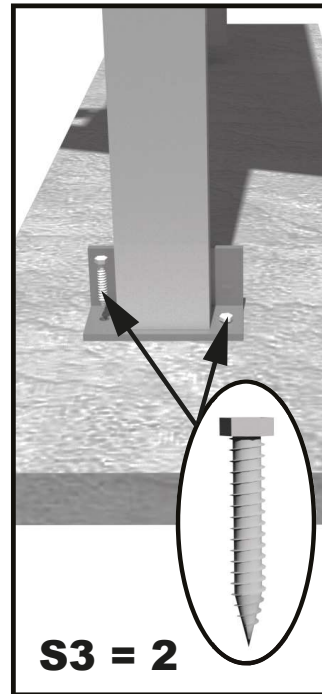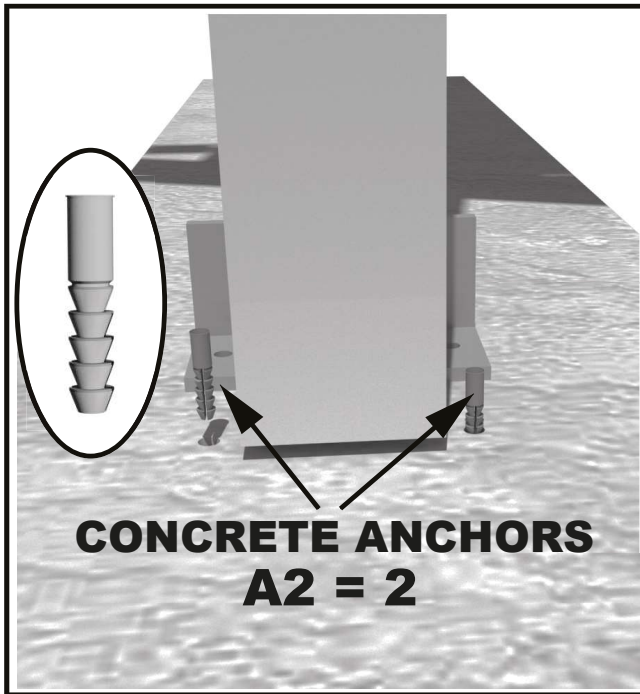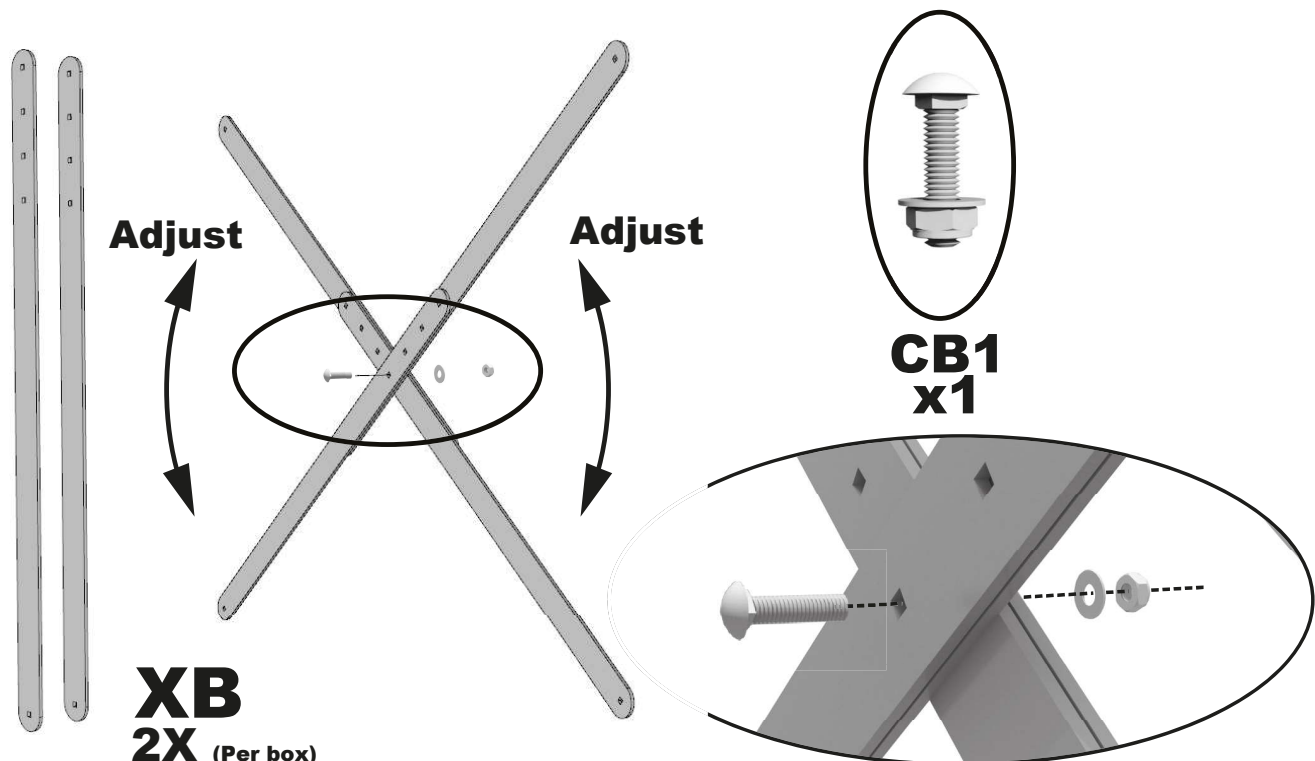
STEP 13 - POST INSTALLATION (ON CONCRETE SLAB) (CONT'D)**STEP 14 - INSTALLATION OF BRACES**


Adjust according
to the height
of support posts

XB
2X (Per box)

← **CONCRETE
SLAB**

S1 = 2
Self-drilling screw

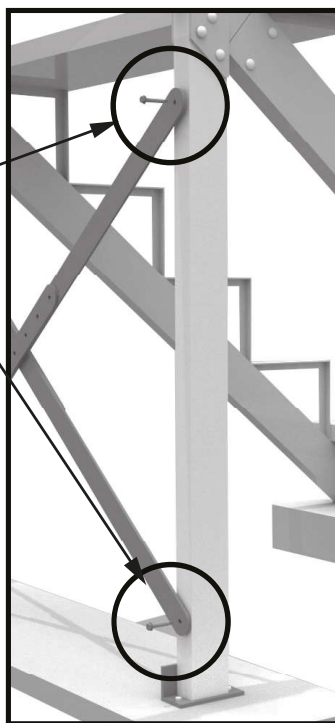

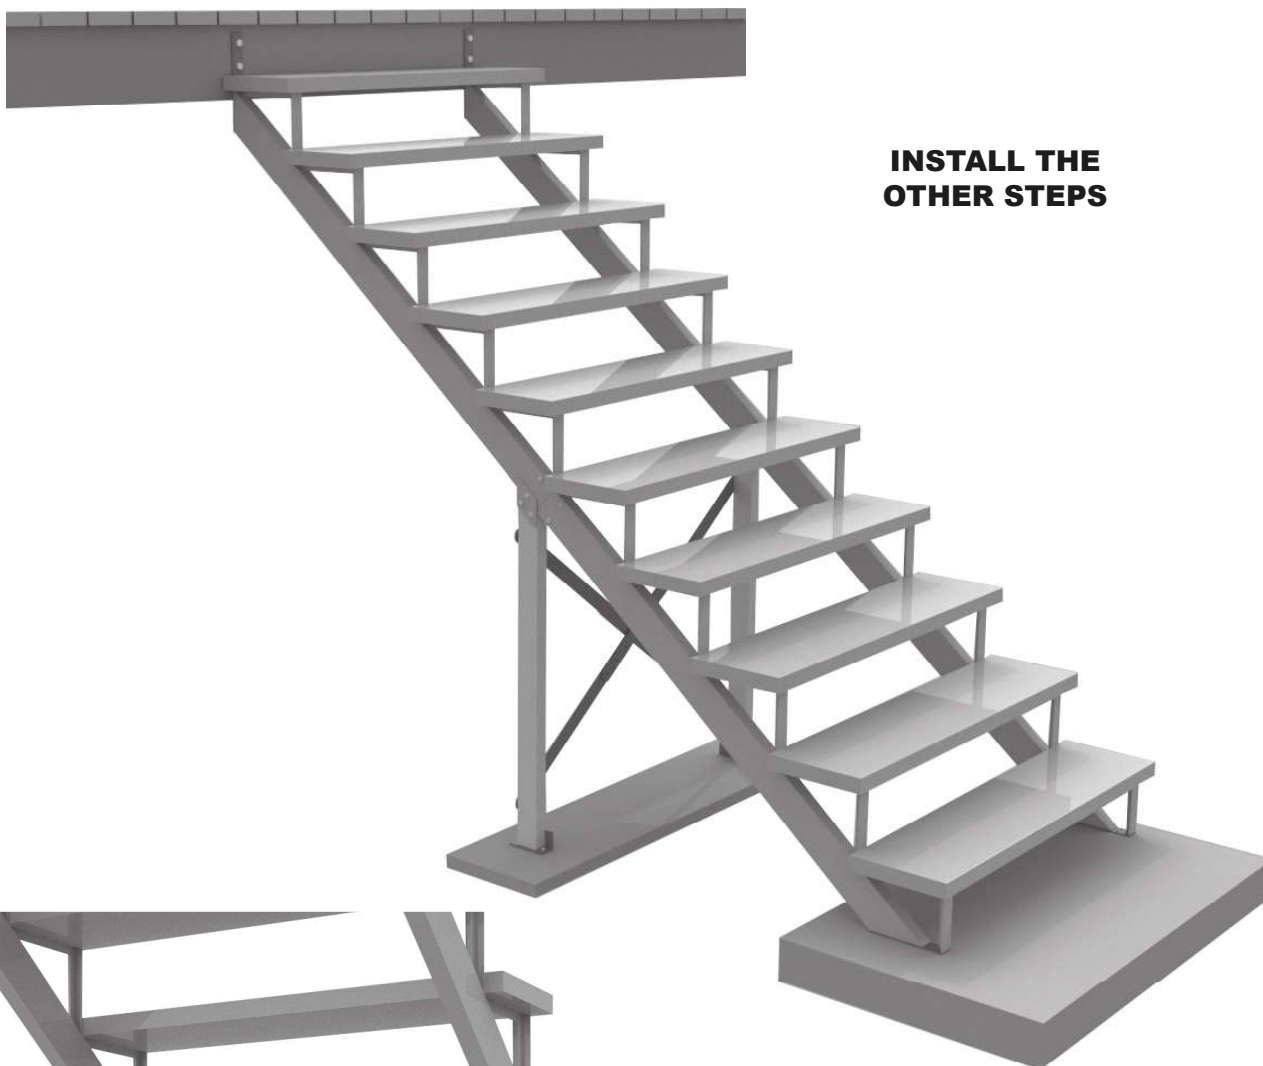



RATE US!



Satisfied with your Pylex product?

Please let us know by sharing pictures with us at info@pylex.com

You can also write a review online
about your purchase.

(By sending your image, you agree to give Pylex the right to it in its marketing activities).

Thank you !

YOU LIKED OUR PRODUCT?

Visit our website: www.pylex.com to see all our products
or **scan this QR code** to have access to our catalog!



Pylex Guarantee Certificate



Follow us on:

