

Here is the most
up-to-date version
of the installation
VIDEO



Here is the most
up-to-date version
of the installation
GUIDE




INSTALLATION GUIDE



PERGOLA HARDWARE BRACKET SET

#12072

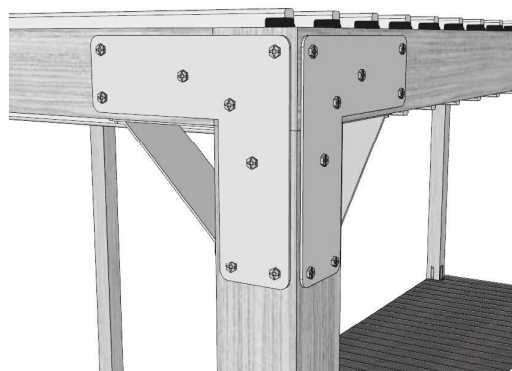

Got a question? - Contact us:


First contact our friendly customer service team for assistance.

Email: info@pylex.com or phone: 1-800-264-1881

Monday to Friday: 8:30 am to 4:30 pm (EST)


Replacement of damaged or missing parts will be shipped promptly.

Rev.: 52-0603

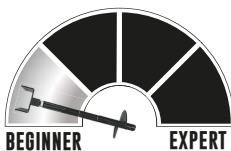

DECK AND FENCE HARDWARE
WWW.PYLEX.COM / 1 800-264-1881

PARTS LIST

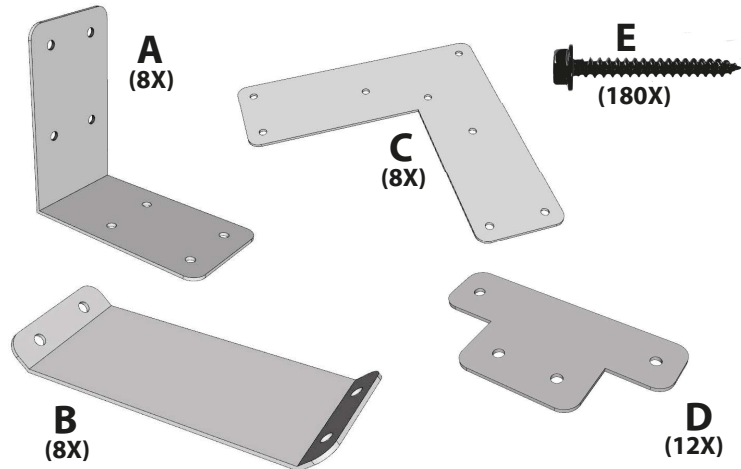


TOOLS REQUIRED




IMPORTANT :
TO PREVENT LUMBER WARDING
WE SUGGEST TO ATTACH THE WOOD AND TO LET IT DRY
FOR 2 TO 3 WEEKS PRIOR TO CONSTRUCTION.

POST: 4" X 4"

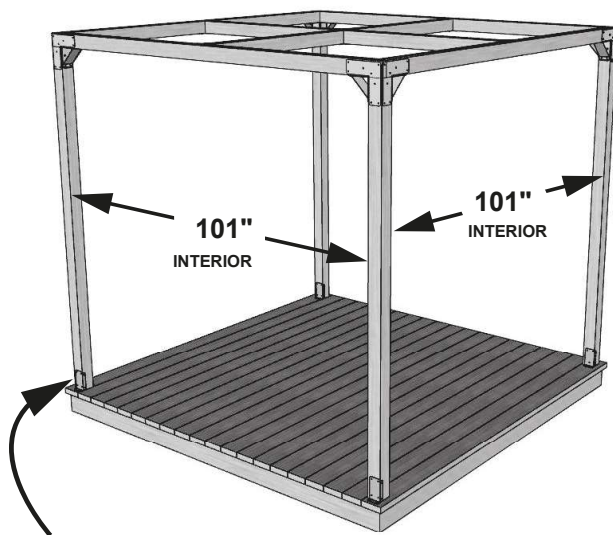

**UNIVERSAL PERGOLA
POST BASE (Set of 4 bases)**
Product #12071 / Sold separately

THIS DECK IS FOR
EXAMPLE ONLY

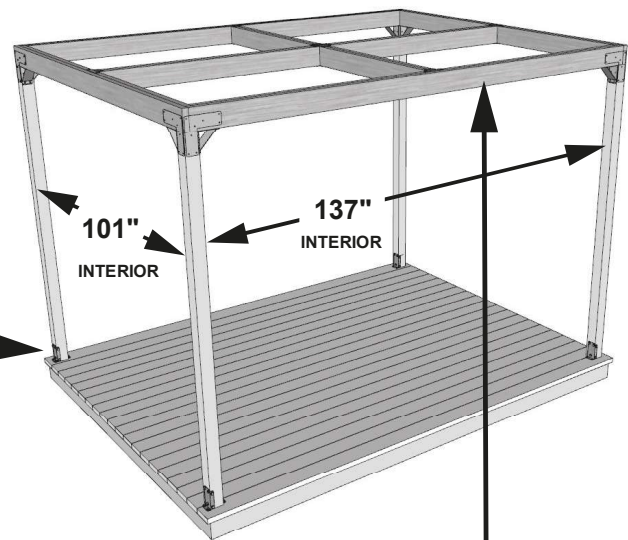


**IMPORTANT: IT IS RECOMMENDED TO
USE 2" X 6" BEAMS FOR
A 9' X 12' PERGOLA**

FOR THIS EXAMPLE WE ARE BUILDING A 9' X 9' PERGOLA


STEP 1 - 9' X 9' PERGOLA



WITH MODEL:
POST: 4" X 4"

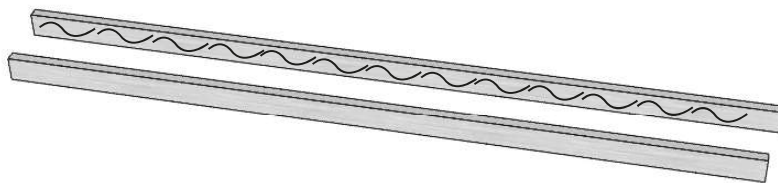

**WE RECOMMEND
GLUING THE 2" X 4"**
(Use construction adhesive)

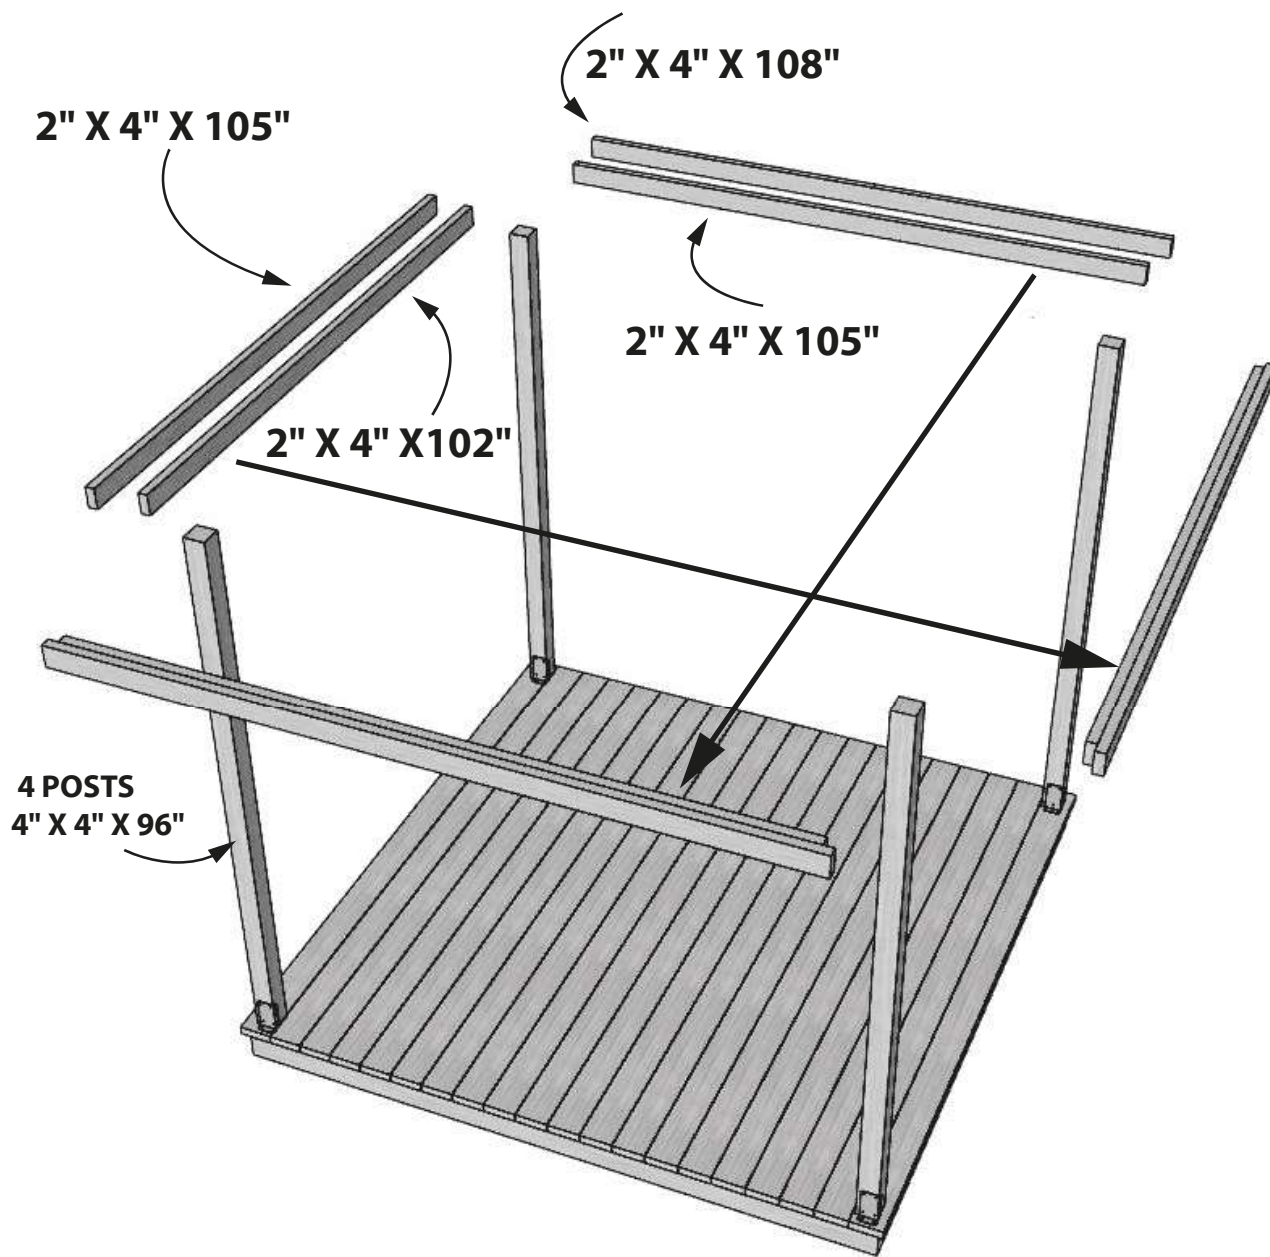



STEP 1 - 9' X 9' PERGOLA - NEXT



TO ASSEMBLE THE BEAM


USE 4 WOOD SCREWS ON
EACH CORNER OF THE BEAM
(3 1/2" WOOD SCREWS - NOT INCLUDED)

SUGGESTED CORNER ASSEMBLY

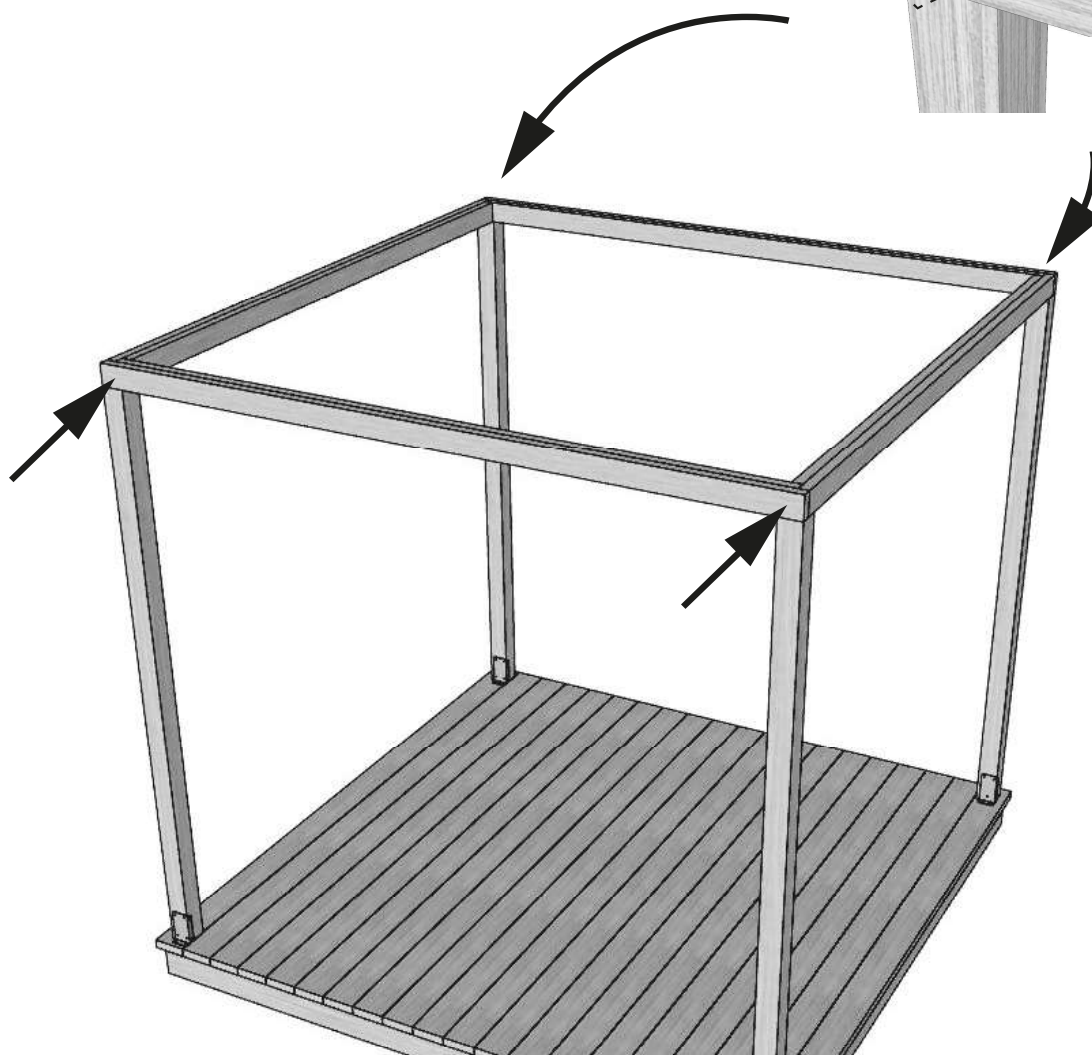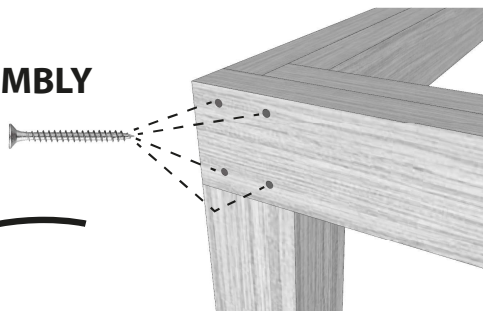

**WE SUGGEST PRE-DRILLING WITH 1/16" DRILL BIT
FOR THE WHOLE CONSTRUCTION.**

STEP 2 - "A" PART ASSEMBLY

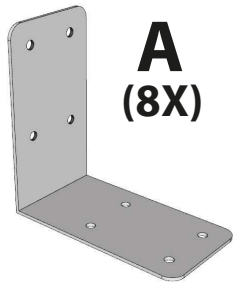


A
(8X)




E (32X)

PROPERLY ALIGNED WITH THE BEAM

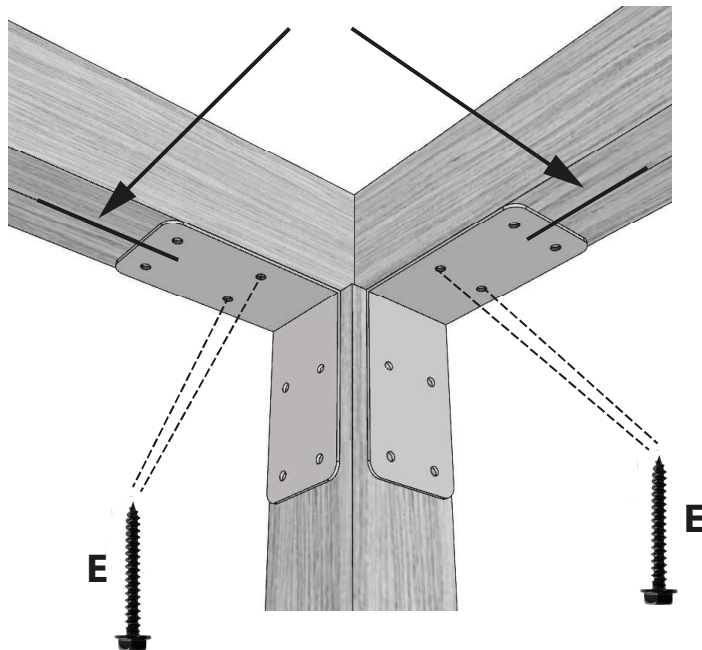

**Do not over
tighten the screws**

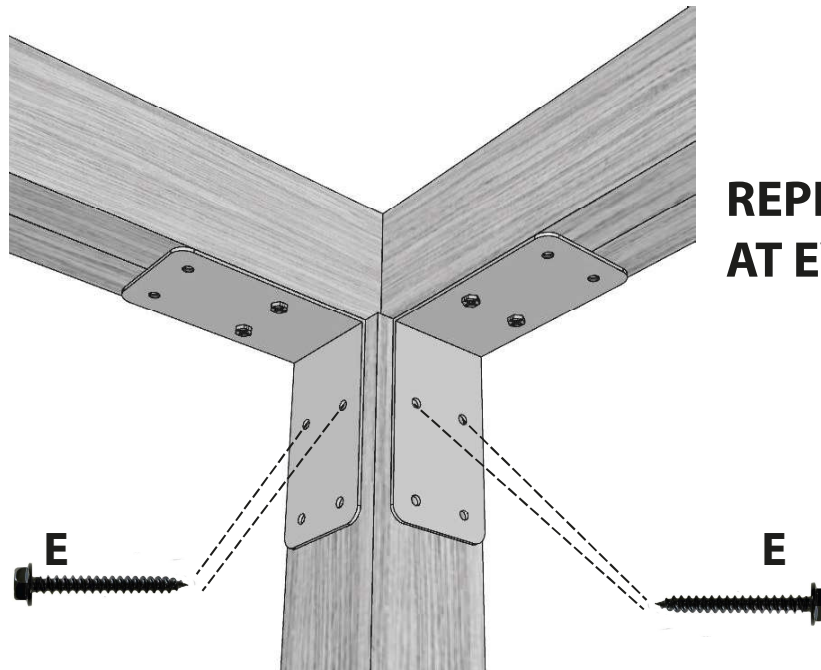


**REPEAT THIS STEP
AT EVERY CORNER**


STEP 3 - "B" PART ASSEMBLY



B
(8X)

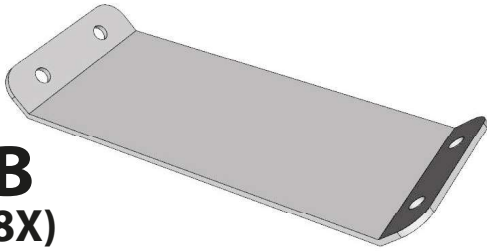



E (32X)

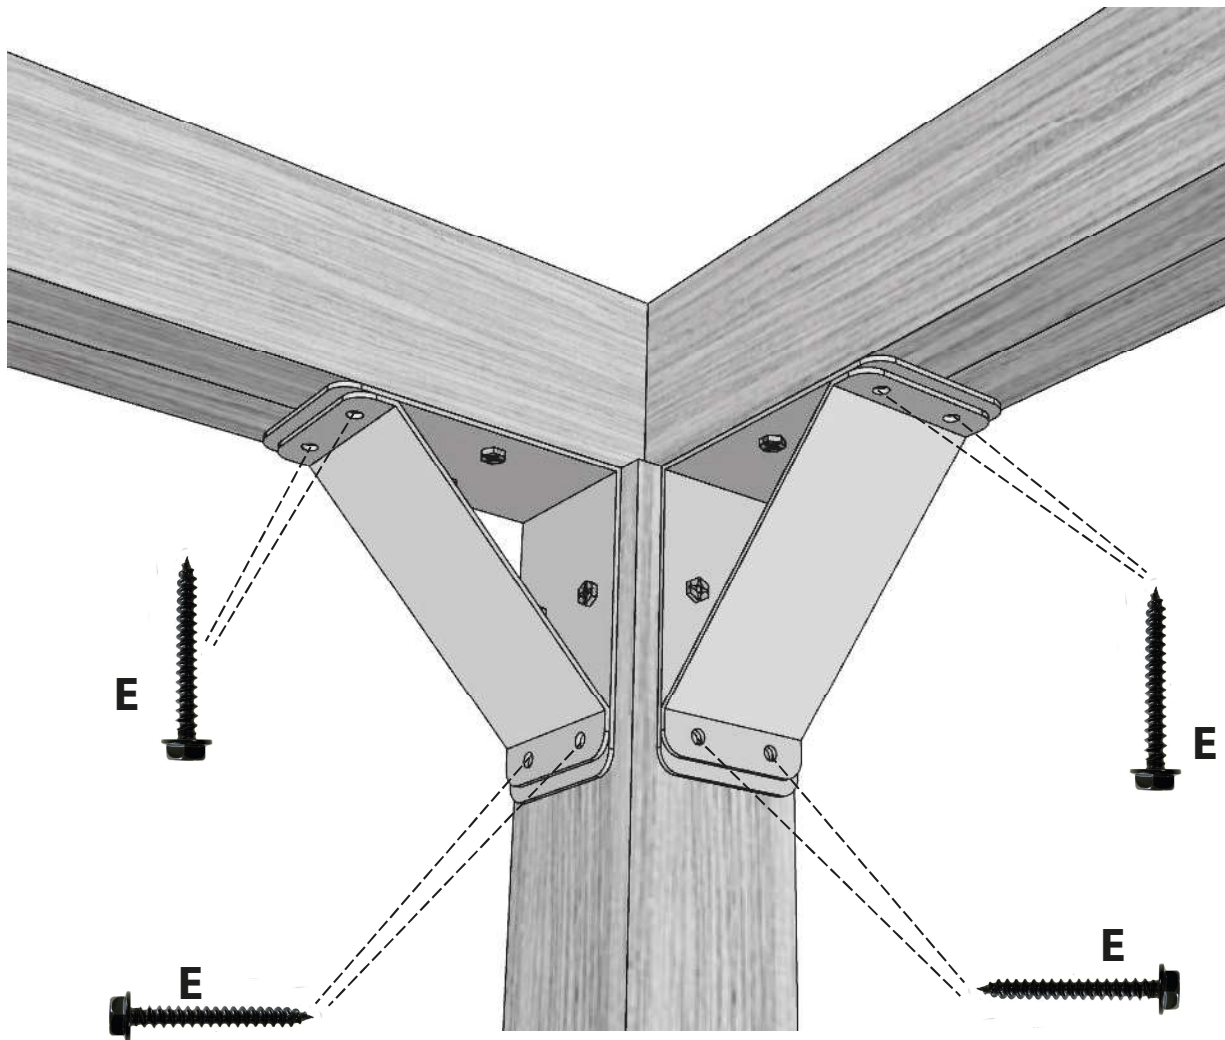

**Do not over
tighten the screws**


**REPEAT THIS STEP
AT EVERY CORNER**

STEP 4 - "C" PART ASSEMBLY

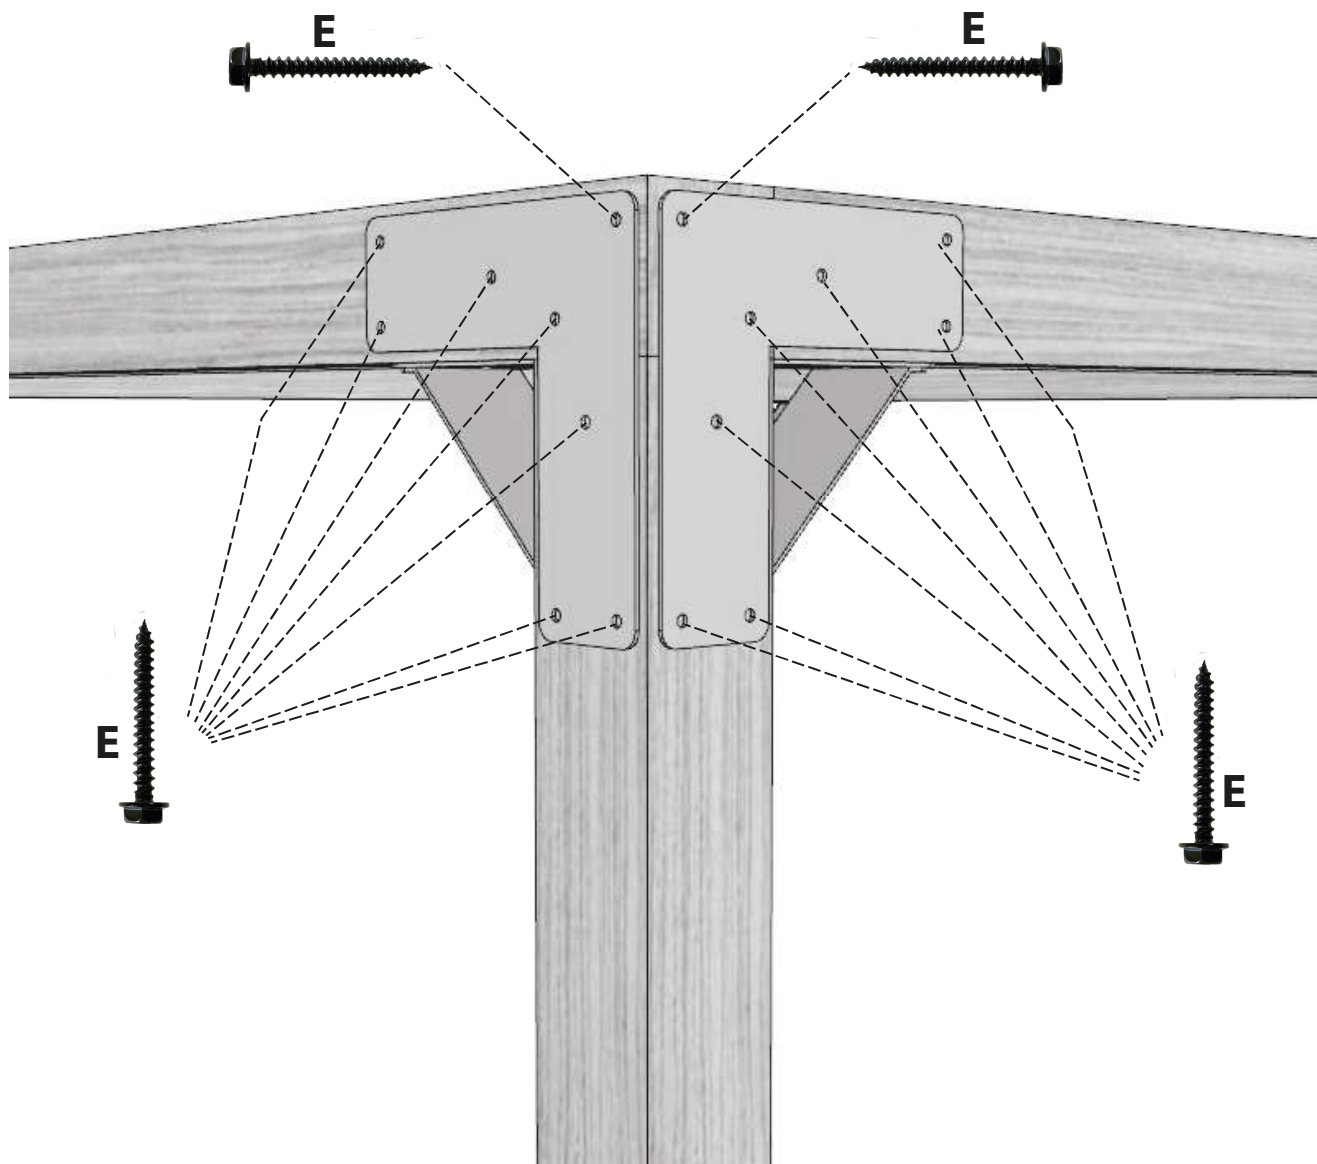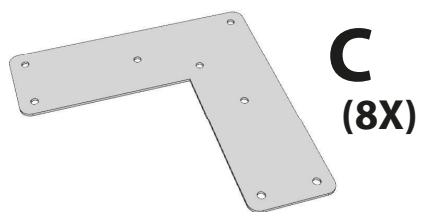


REPEAT THIS STEP AT EVERY CORNER

Do not over tighten the screws

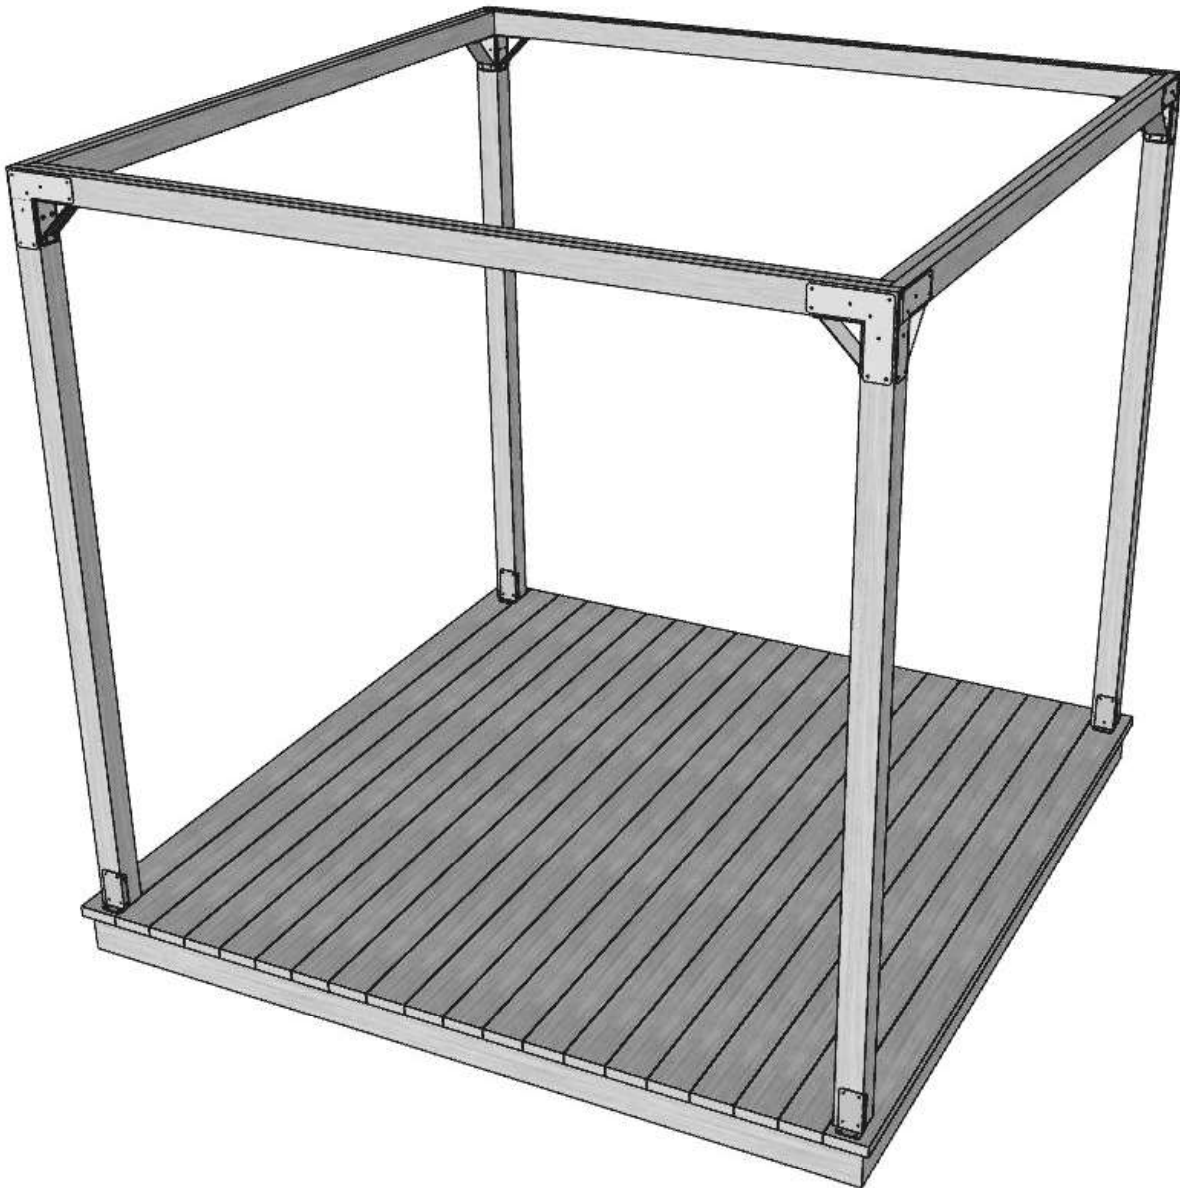



STEP 5 - "D" PART ASSEMBLY

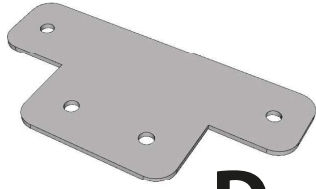

D (4X)




E (8X)

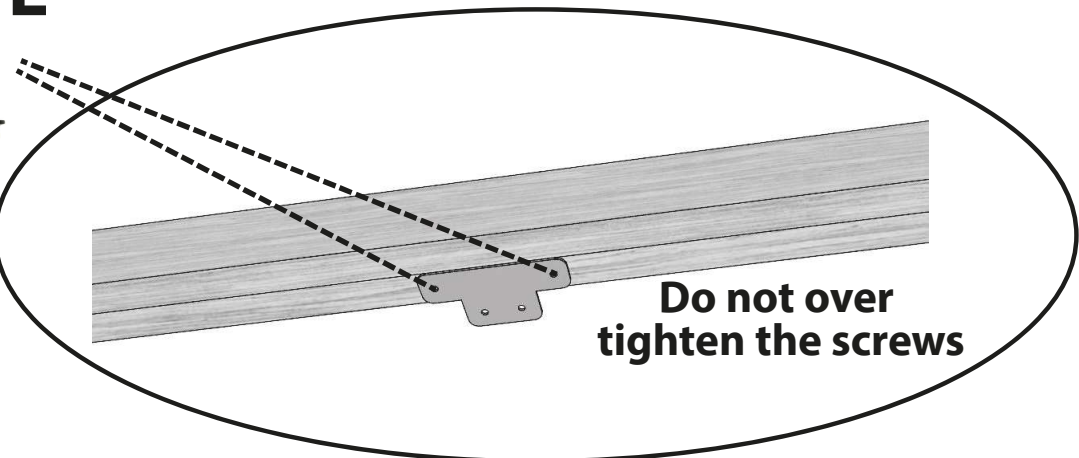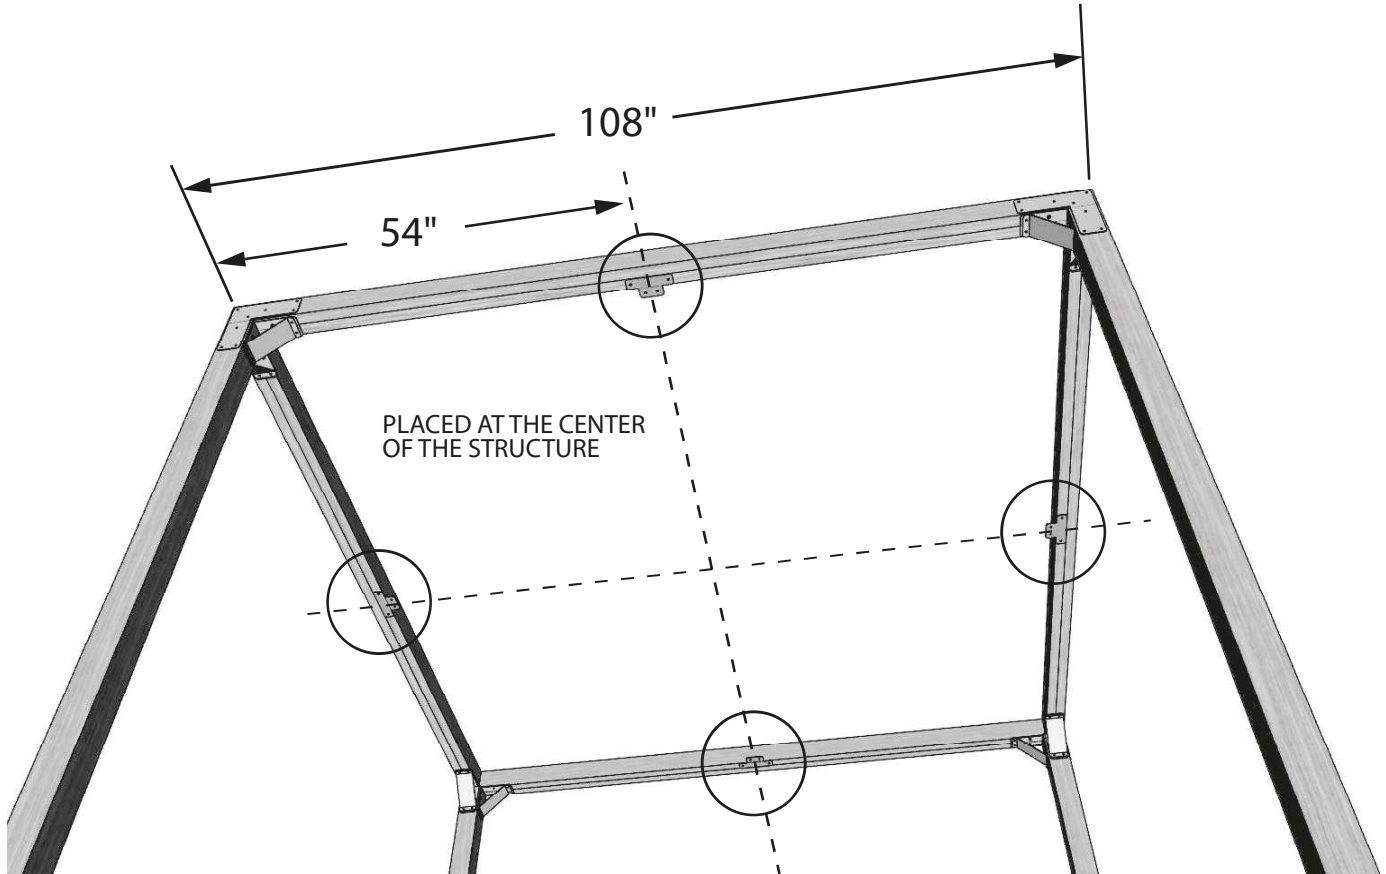


STEP 6 - "D" PART ASSEMBLY - NEXT



E (4X)




**WE RECOMMEND
GLUING THE 2" X 4"**
(Use construction adhesive)

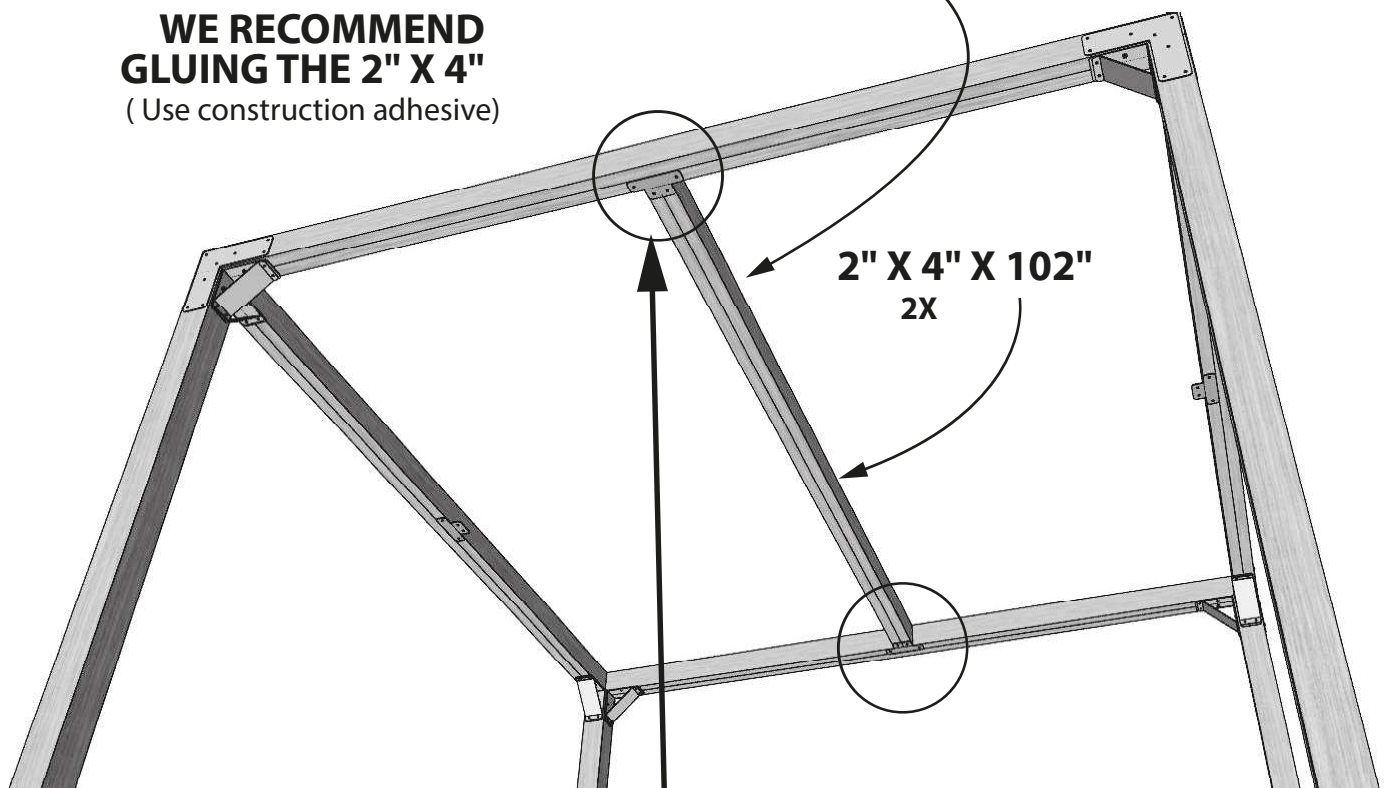




2" X 4" X 102"
2X

E

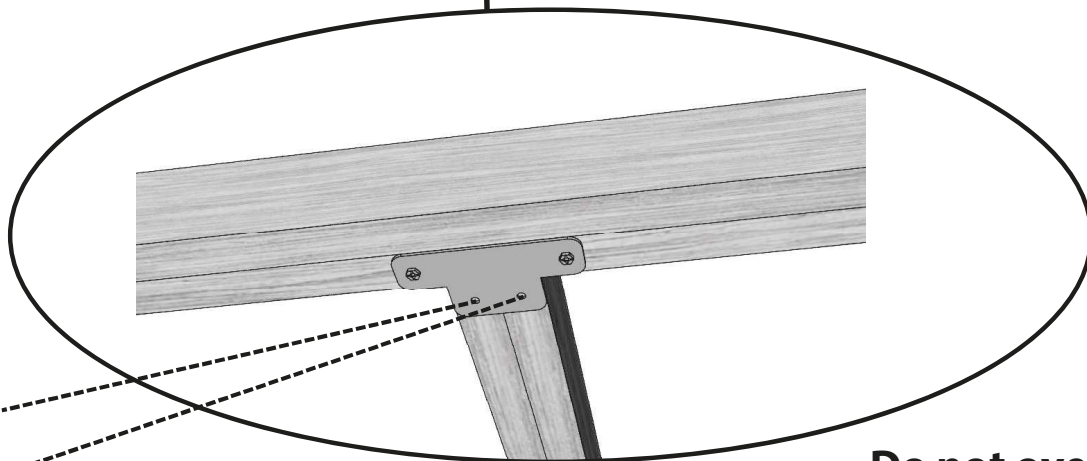

**Do not over
tighten the screws**



STEP 6 - "D" PART ASSEMBLY - NEXT

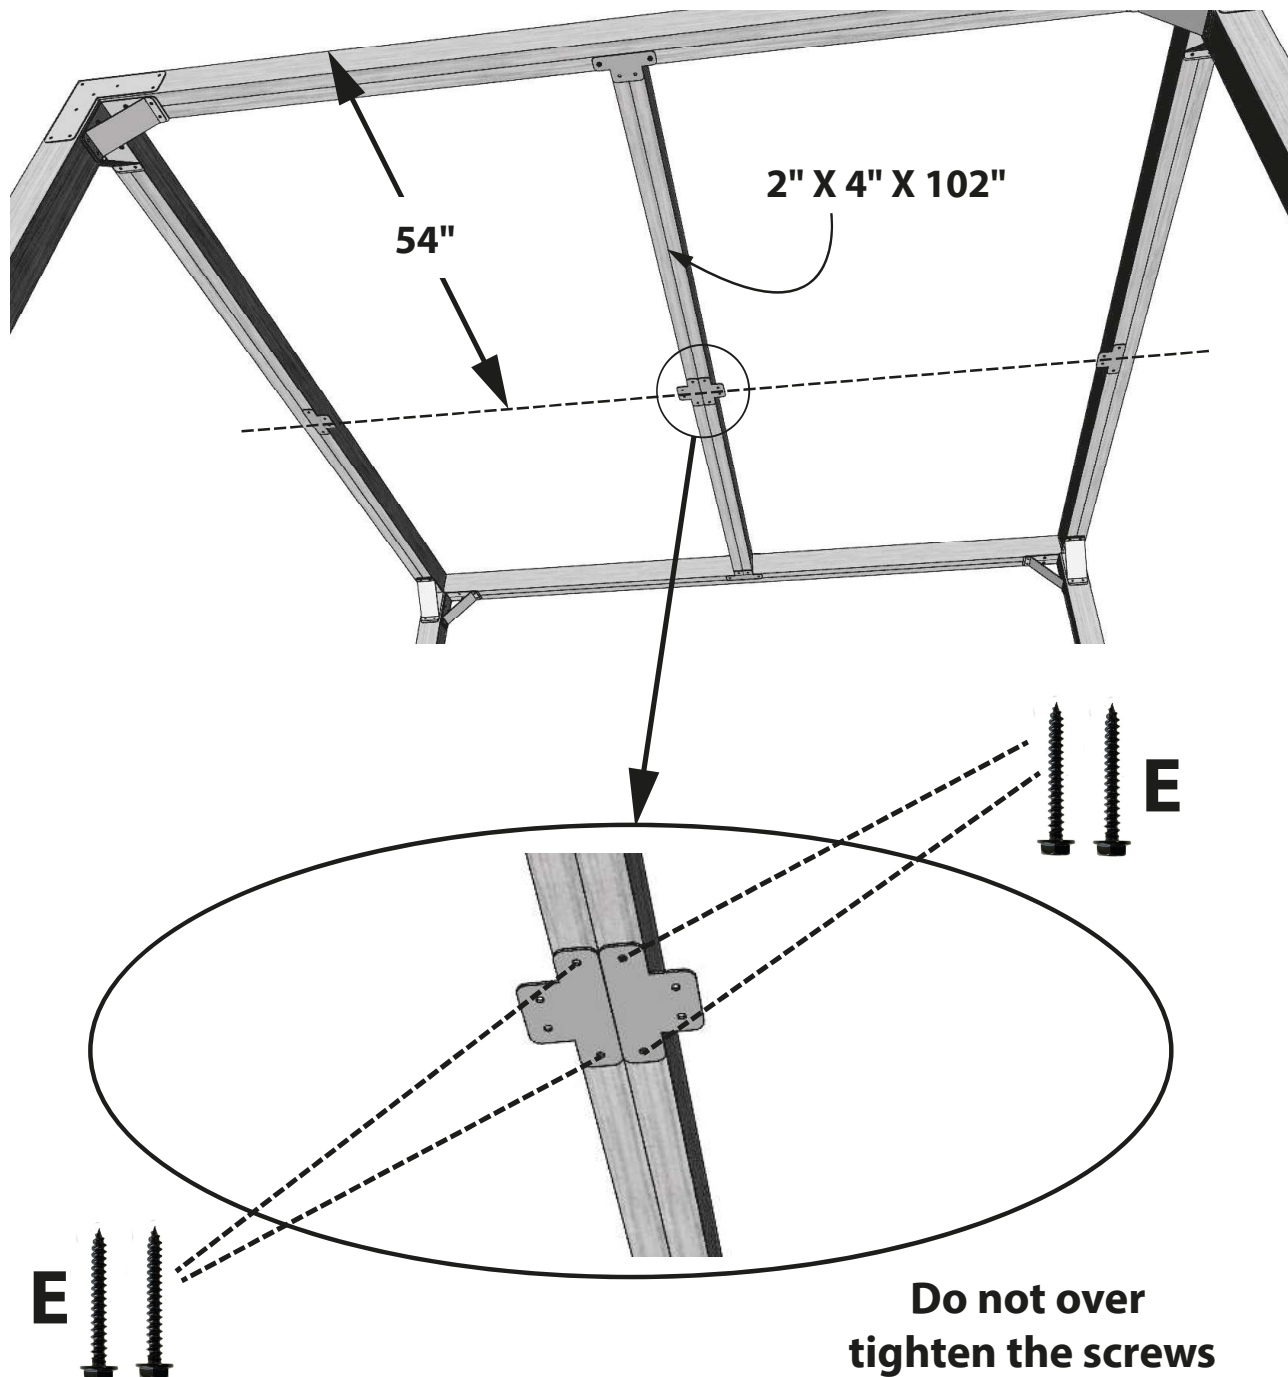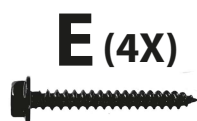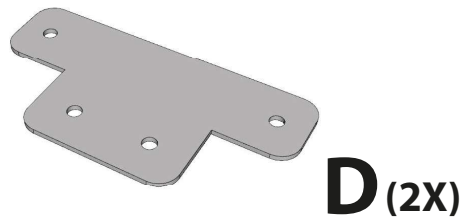

STEP 6 - "D" PART ASSEMBLY - NEXT







E (8X)

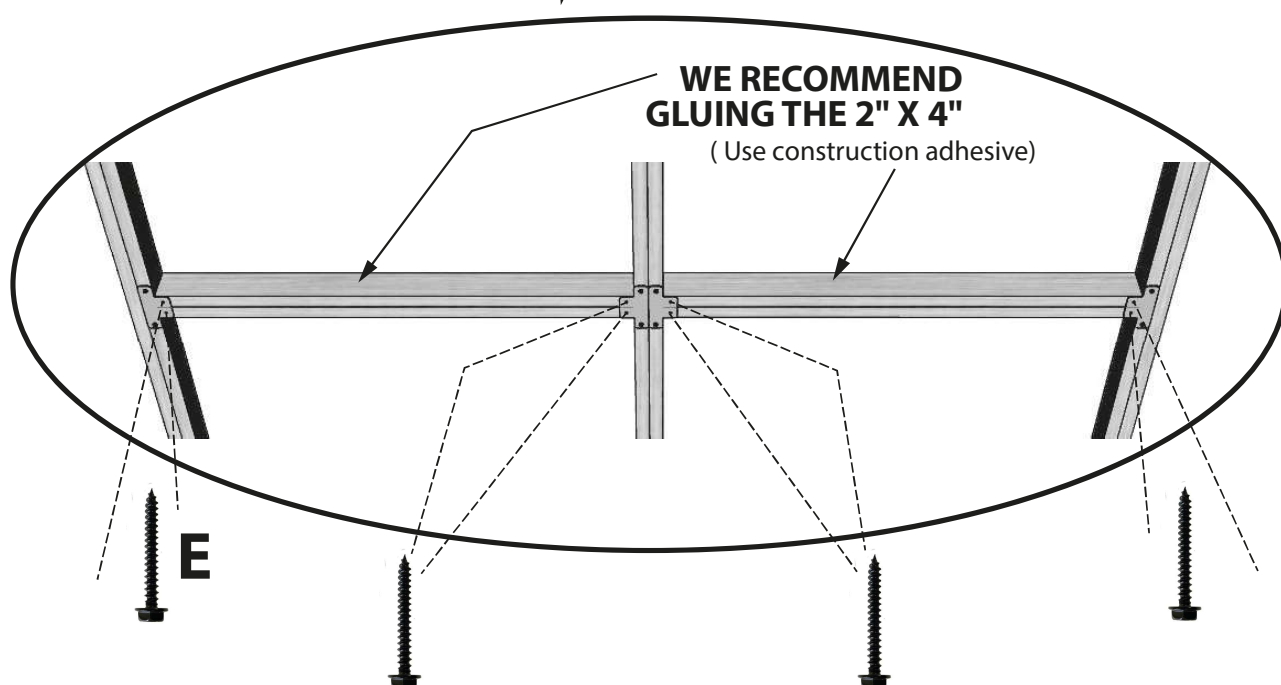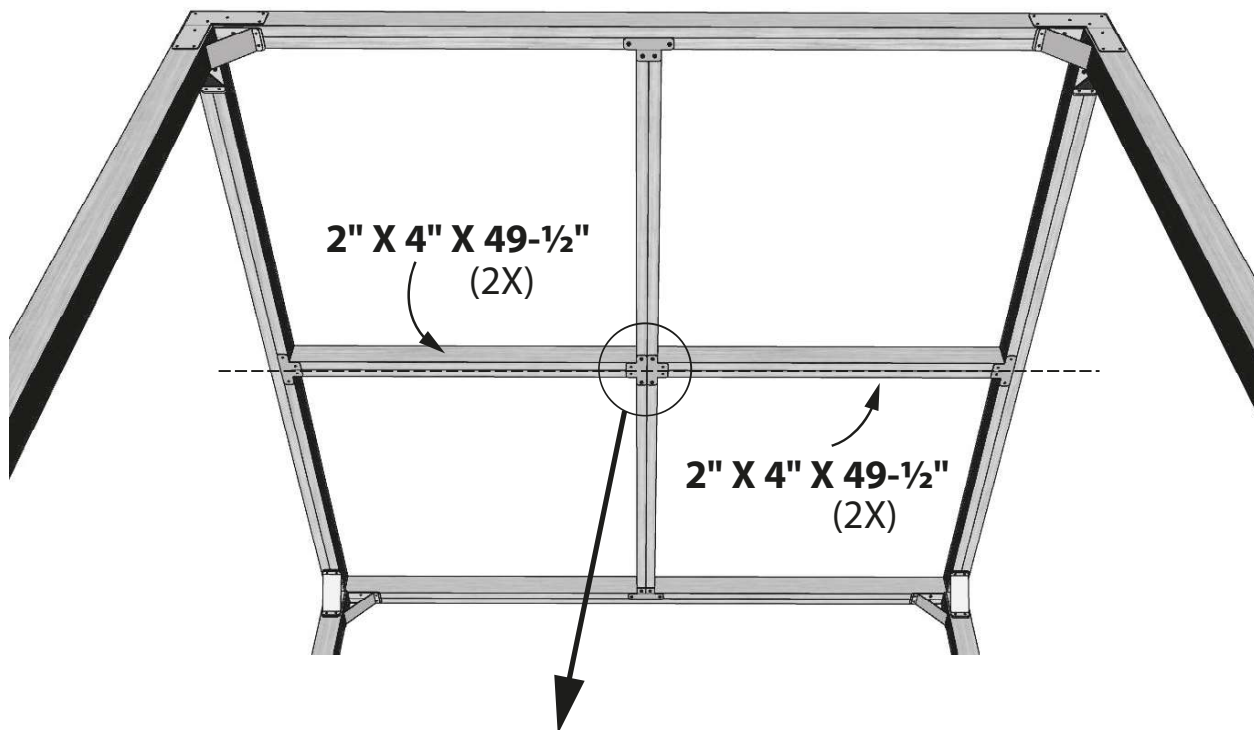

Do not over tighten the screws


ÉTAPE 6 - "D" PART - NEXT

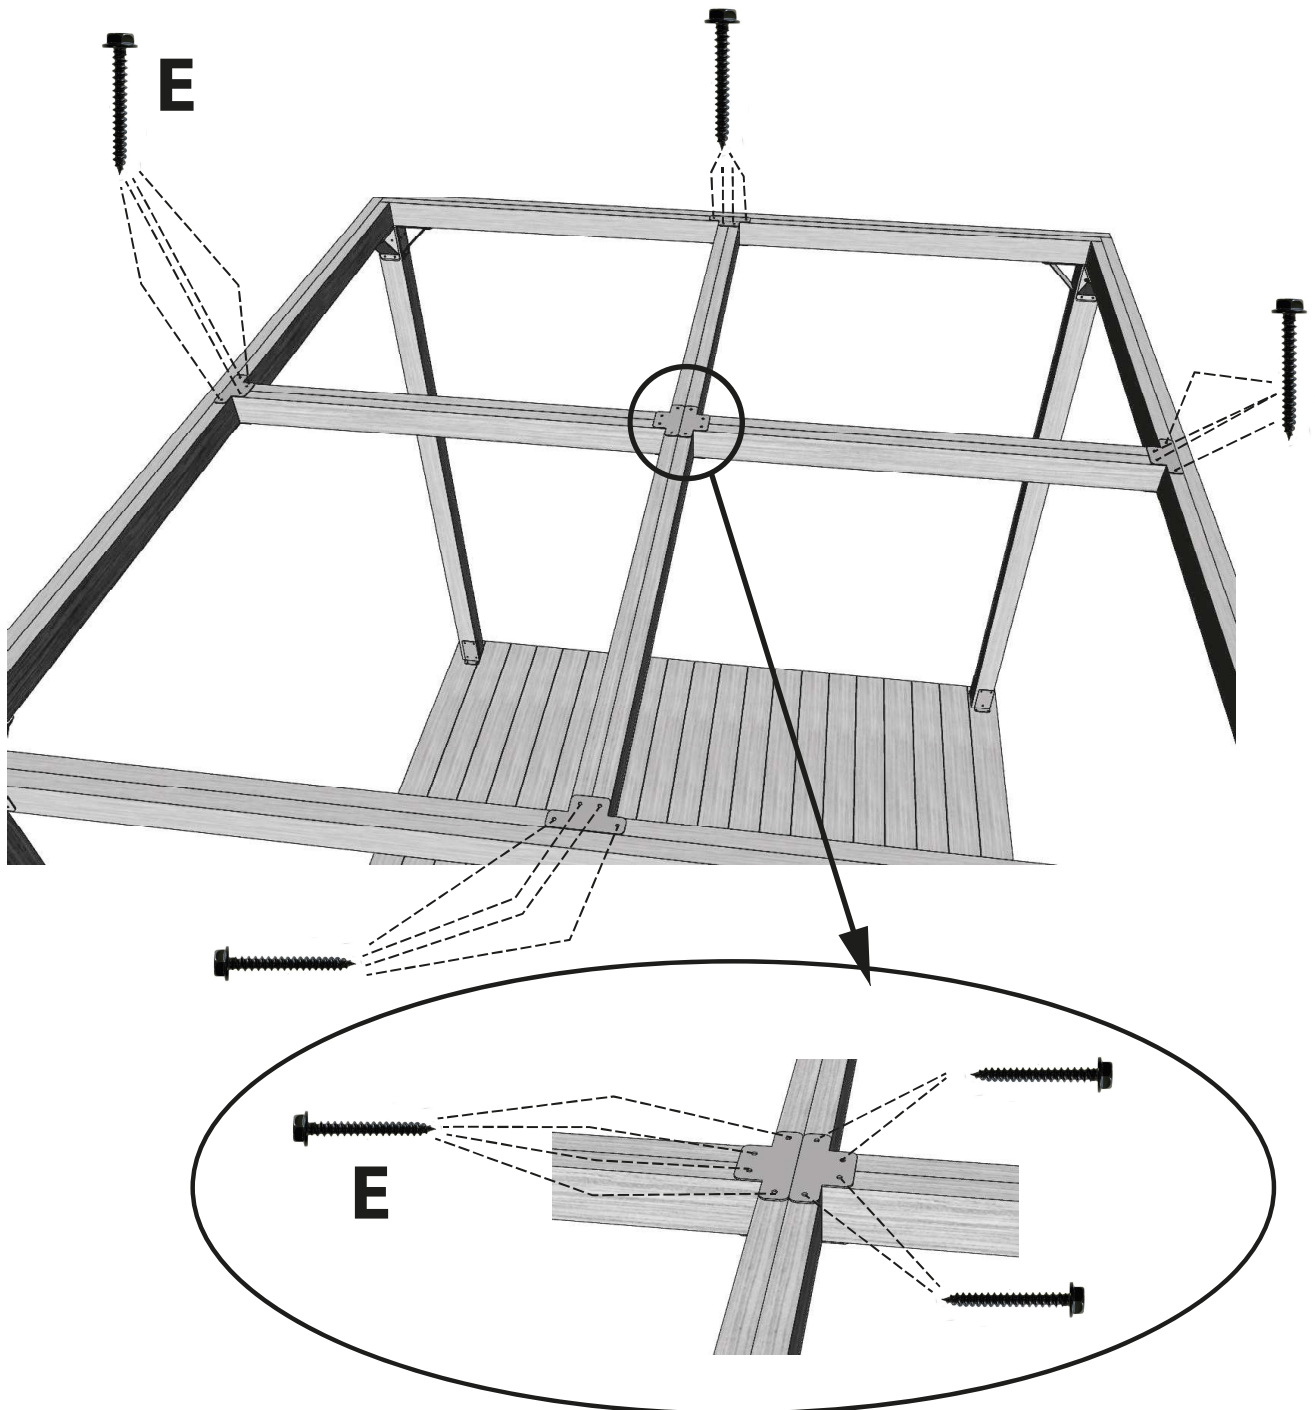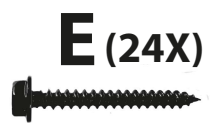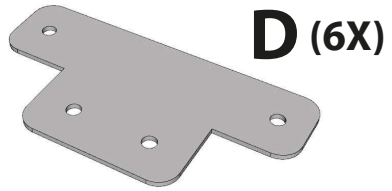

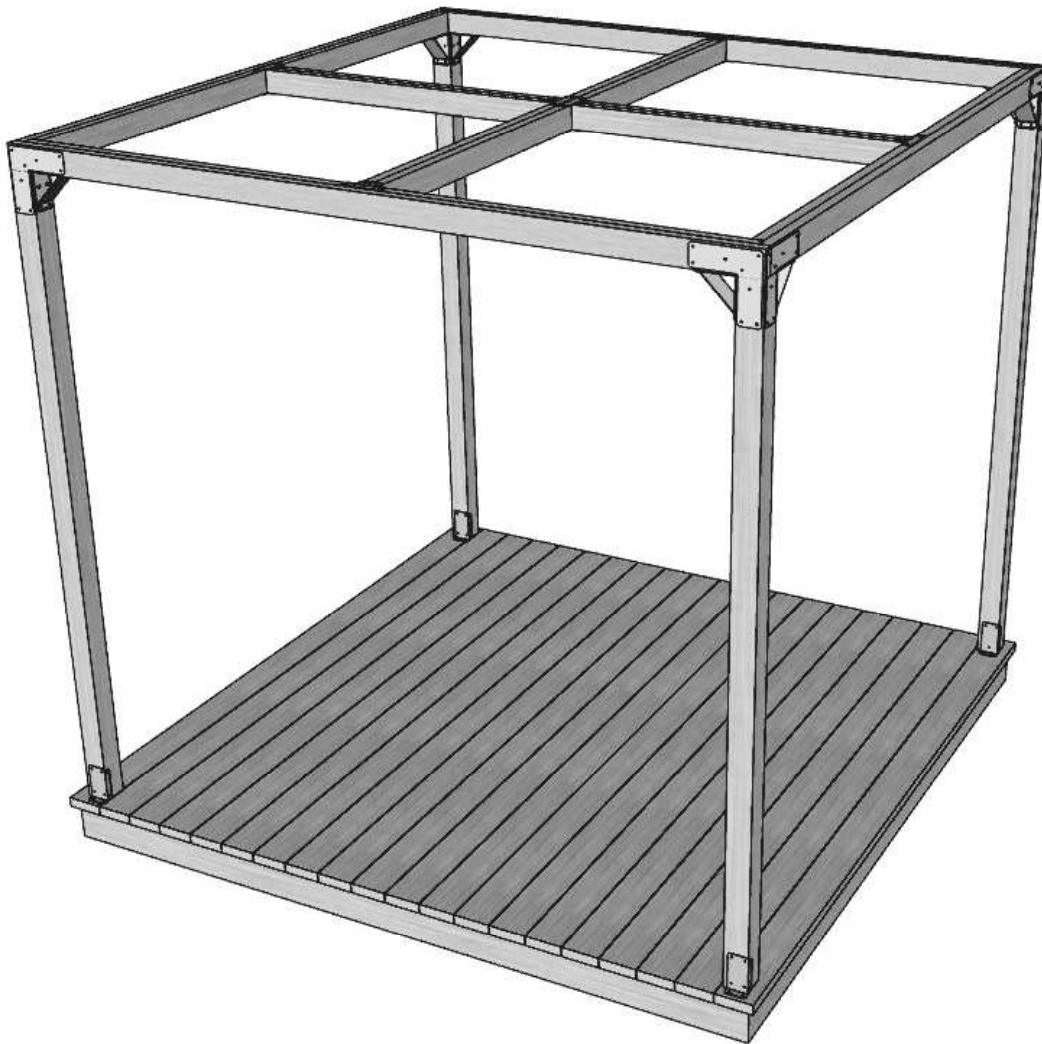

**SUGGESTED ROOF:
PERGOLA HARDWARE SHUTTERS
PRODUCT #12073**

(Sold separately)

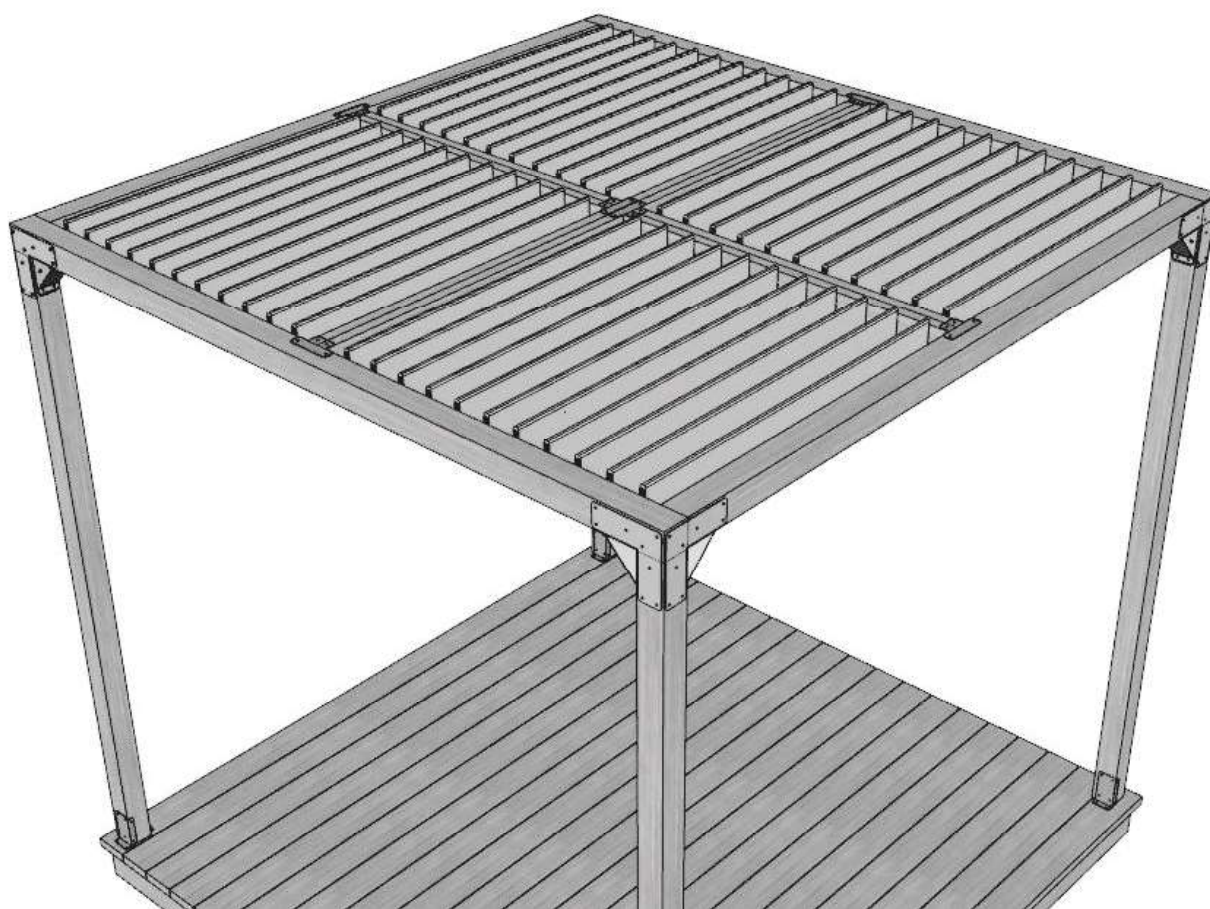



RATE US!



Satisfied with your Pylex product?

Please let us know by sharing pictures with us at info@pylex.com

You can also write a review online
about your purchase.

(By sending your image, you agree to give Pylex the right to it in its marketing activities).

Thank you !

YOU LIKED OUR PRODUCT?

Visit our website: www.pylex.com to see all our products
or **scan this QR code** to have access to our catalog!



Pylex
Guarantee
Certificate



Follow us on:

